




الحمادي للألكترونيات
ALHAMMADI FOR ELECTRONICS

Axis CNC/Stepper Motor Shield for Arduino

! Shield makes it easy to get your CNC projects up and running in a few hours. It uses opensource firmware to control 4 stepper motors using 4 pieces of A4988 Stepper Motor driver breakout board, with this shield an user can build all kinds of robotics, linear motion projects including CNC routers, laser cutters and even machines.

eg

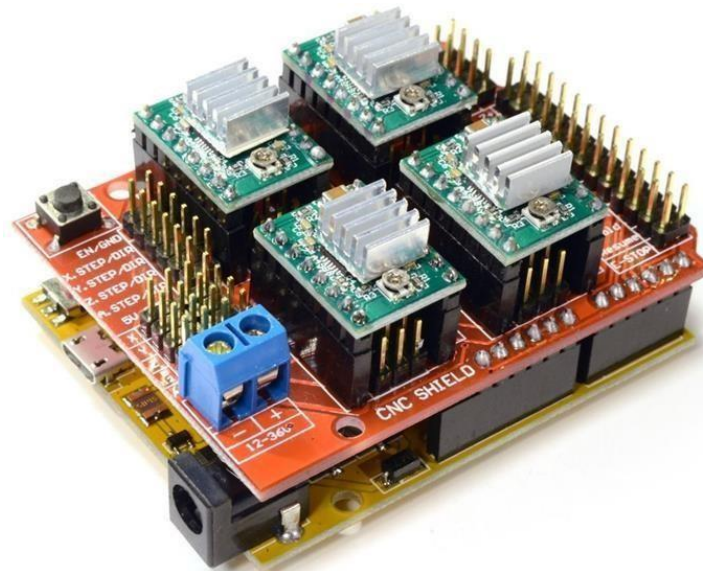

1 compatible. (Open source firmware that runs on an Arduino UNO that turns G-code into stepper signals) 4-axis stepper control (X, Y, Z, A-Can duplicate X,Y,Z or do a full 4th axis with custom firmware using pins D12 and D13) 13 steps for each axis (6 in total)

0.9 A4988 compatible stepper drivers. (A4988, DRV8825 and others)(Not Included) set the Micro-Stepping for the stepper drivers. (Some drivers like the DRV8825 can do 1/16 micro-stepping)

design.

motors can be connected with 4-pin Molex connectors or soldered in place.

12-36VDC. (At the moment only the DRV8825 drivers can handle up to 36V so please consider the operation when powering the board.)




Table of Contents

1. Configuring Micro Stepping for Each Axis	7
2. GRBL Control Software/Firmware for Arduino	8

3. Hooking Up the Stepper Motor to CNC Shield	11
4. G-Code Sender	12
5. Recommended Driver Board & Accessory.....	14

1. Configuring Micro Stepping for Each Axis


Each axis has 3 jumpers that can be set to configure the micro stepping for the A4988 plug-in driver board.

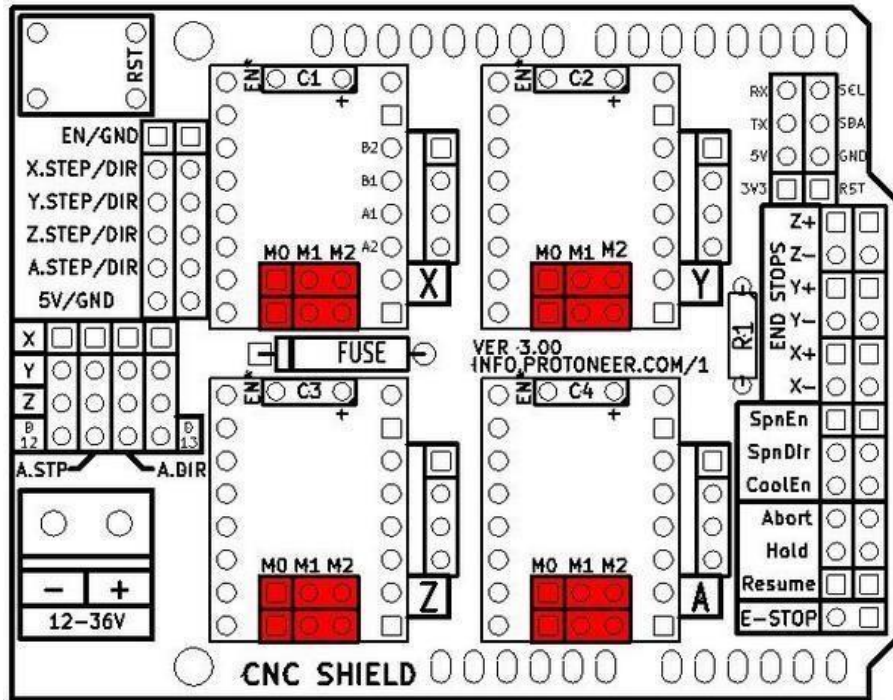


Micro-stepping jumper location, before inserting A4988.

In the tables below „High“ indicates that a jumper is insert and „Low“ indicates that no jumper is inserted.

MS0	MS1	MS2	Microstep Resolution
Low	Low	Low	Full Step
High	Low	Low	1/2 Step
Low	High	Low	1/4 Step
High	High	Low	1/8 Step
High	High	High	1/16 Step

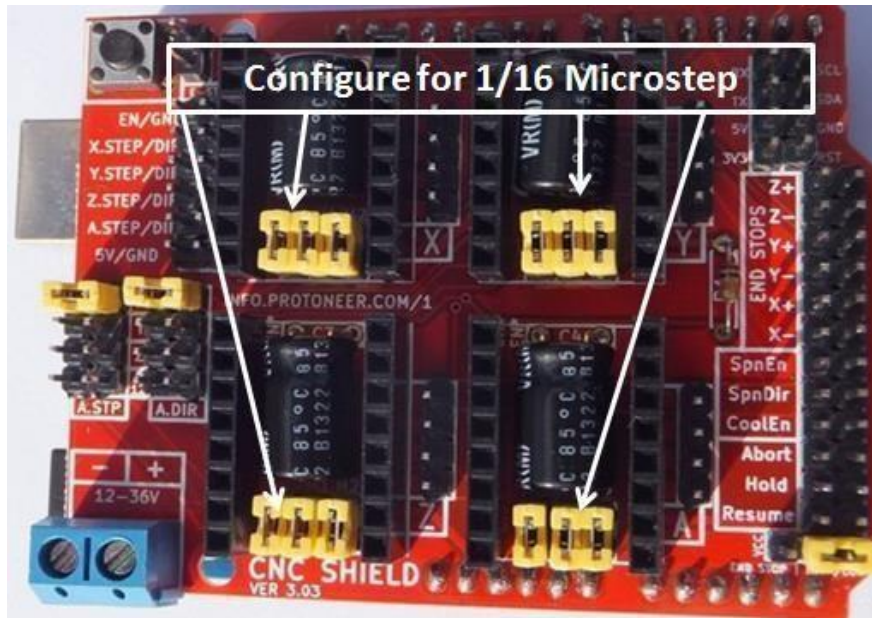

After setting the microstep jumper, you can plug-in A4988 driver boards as shown in the photo below. The photo also shown this CNC sit nicely on top of Arduino Uno board, without any external jumper wires.

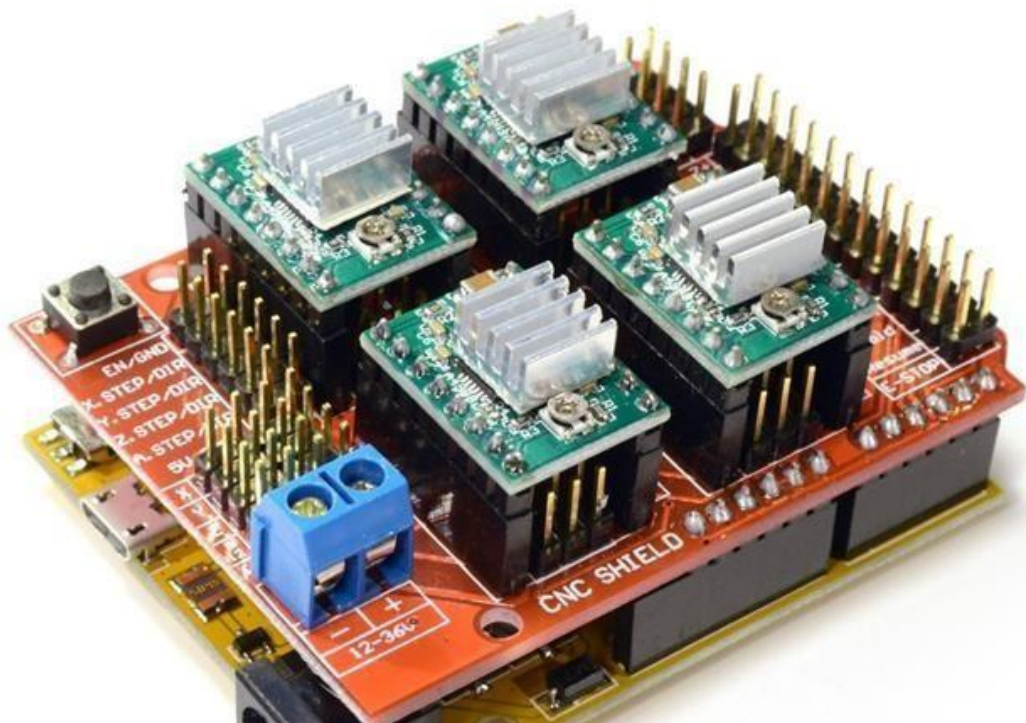

!!! Beware of the orientation of the A4988 driver boards! You will destroy the A4988 driver board if plug-in with wrong orientation.

2. GRBL Control Software/Firmware for Arduino

Before you can use this CNC shield with Arduino, a control firmware need to be downloaded into Arduino board. We are going to use „GRBL“ to accomplish our job. GRBL is open-source software that runs on an

Arduino Uno that takes G-Code commands via Serial and turns the commands into motor signals. Grbl is a no-compromise, high performance, low cost alternative to parallel-port-based motion control for CNC machine. It accepts standards-compliant g-code and has been tested with the output of several CAM tools with no problems. Arcs, circles and helical motion are fully supported, as well as, all other primary g-code commands. Macro functions, variables, and most canned cycles are not supported, but we think GUIs can do a much better job at translating them into straight g-code anyhow.

A copy of this open-source firmware can be downloaded from the below link:

Following the below steps to prepare this CNC Shield board to function properly:

1. Download a copy of GRBL from: <https://github.com/grbl/grbl>

grbl / grbl

Watch 438 Star 1,797 Fork 1,137

Code Issues 103 Pull requests 9 Projects 0 Wiki Pulse Graphs

An open source, embedded, high performance g-code-parser and CNC milling controller written in optimized C that will run on a straight Arduino <https://github.com/grbl/grbl/wiki>

631 commits 5 branches 0 releases 24 contributors GPL-3.0

Branch: master New pull request Find file Clone or download

chamnit Non-CoreXY compiling fix.

build	Git fix for empty directory. Makefile updated.	
doc	Non-CoreXY compiling fix.	
grbl	Non-CoreXY compiling fix.	
.gitignore	Merge branch 'edge'	2 years ago
COPYING	Homing alarm upon no switch. Licensing update.	2 years ago
Makefile	Added restore settings defaults command.	a year ago
README.md	No variable spindle and spindle speed	months ago


Open in Desktop Download ZIP

Click here to download this zip file.


grbl

Unzip this file into your local hardisk location, you may want to create a special new folder for this purpose for easy locating of all files needed in your project. Locate an Arduino sketch „*grblUpload.ino*“ in this folder where you have unzip the files.


Below is the files structures located in my local hardisk:

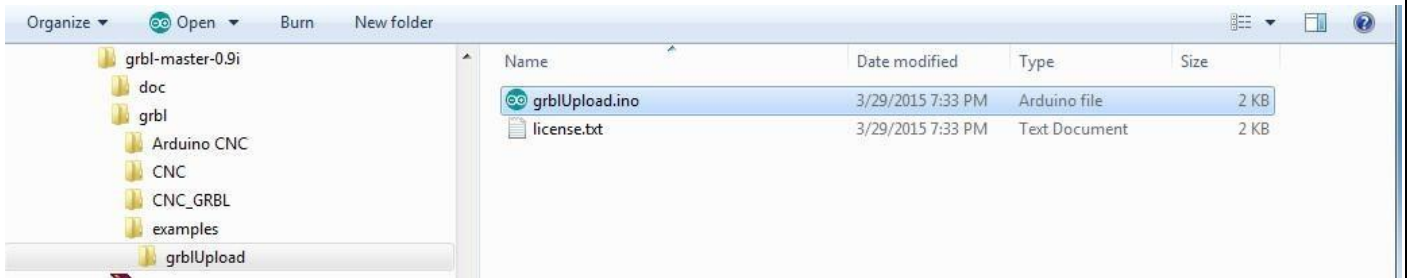

Open up this sketch „*grblUpload.ino*“ and you should see the screen as below:

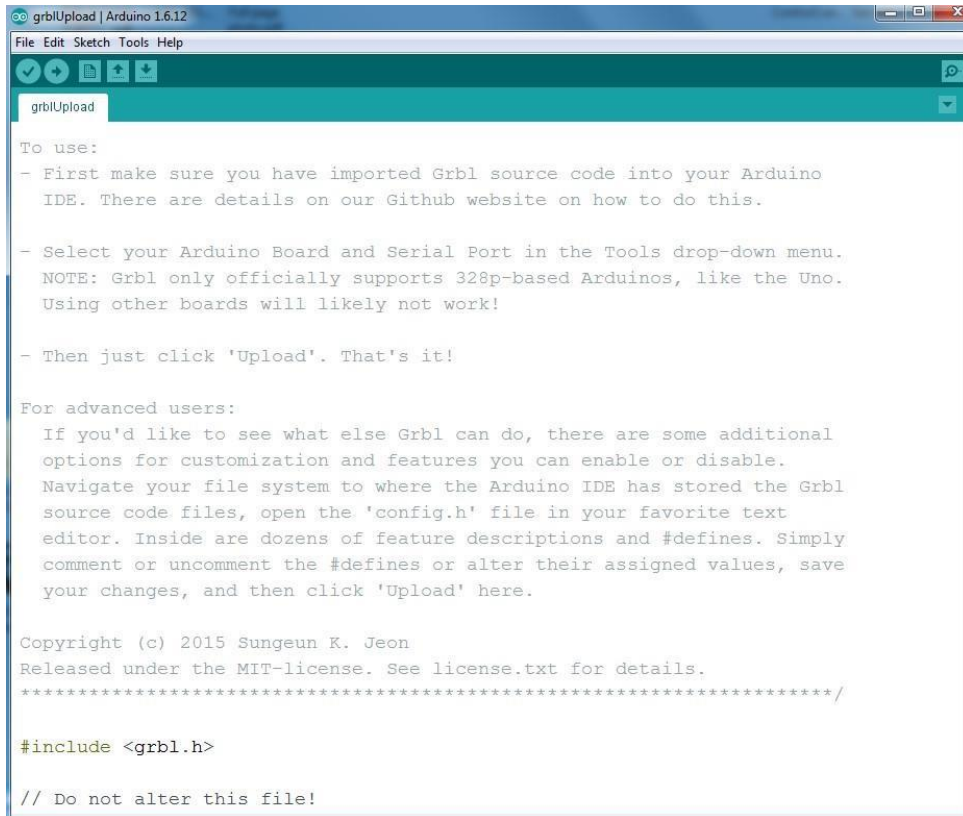



Click the upload icon as usual to „compile/upload“ as you normally upload Arduino sketch. When you see „done uploading“, click the „Serial Monitor“ on Arduino IDE as shown below:

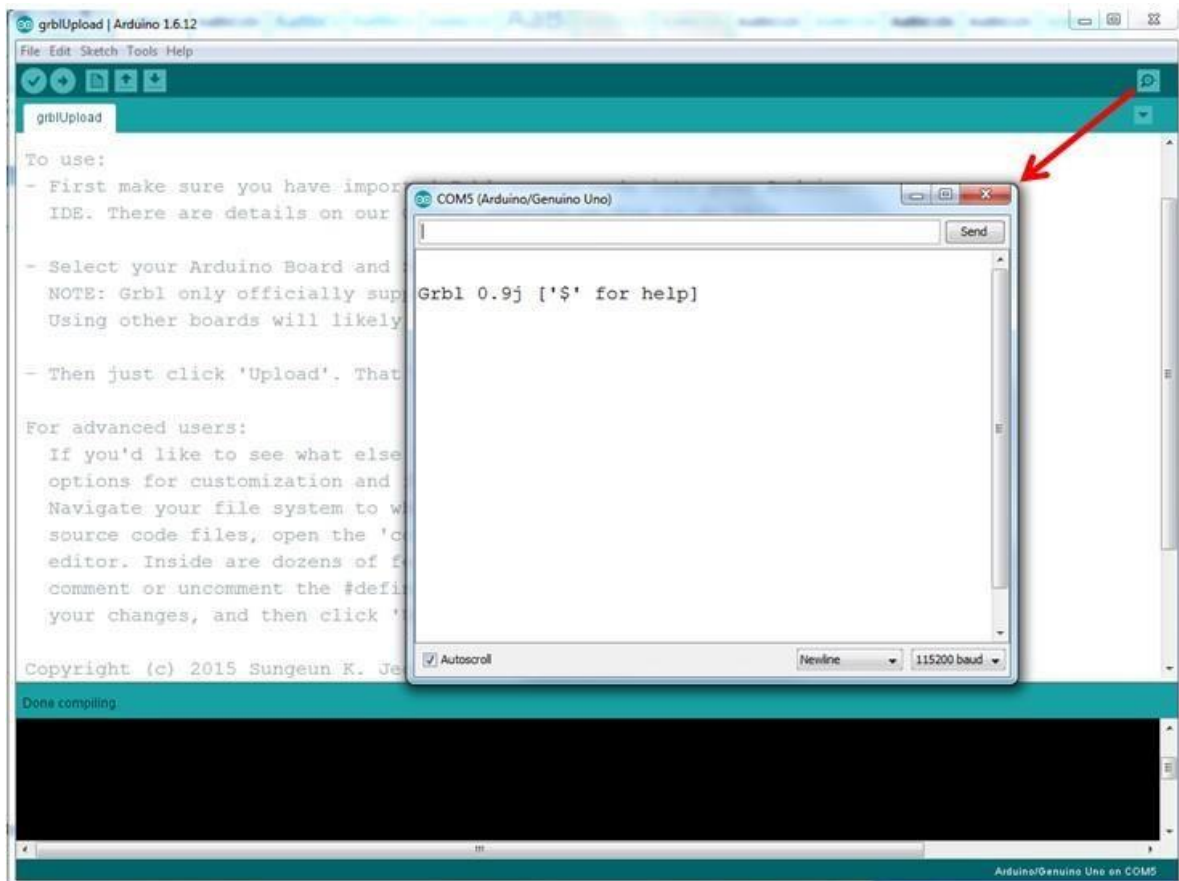

If you can receive response message “ *Grbl 0.9j ['\$' for help]* ” from your Serial Monitor, congratulation! You have successful uploaded the „GRBL“ firmware into your Arduino board.

3. Hooking Up the Stepper Motor to CNC Shield

Connect steppers motor to CNC Shield board as the below block diagram. of the CNC Shield connected to 3-stepper motor:

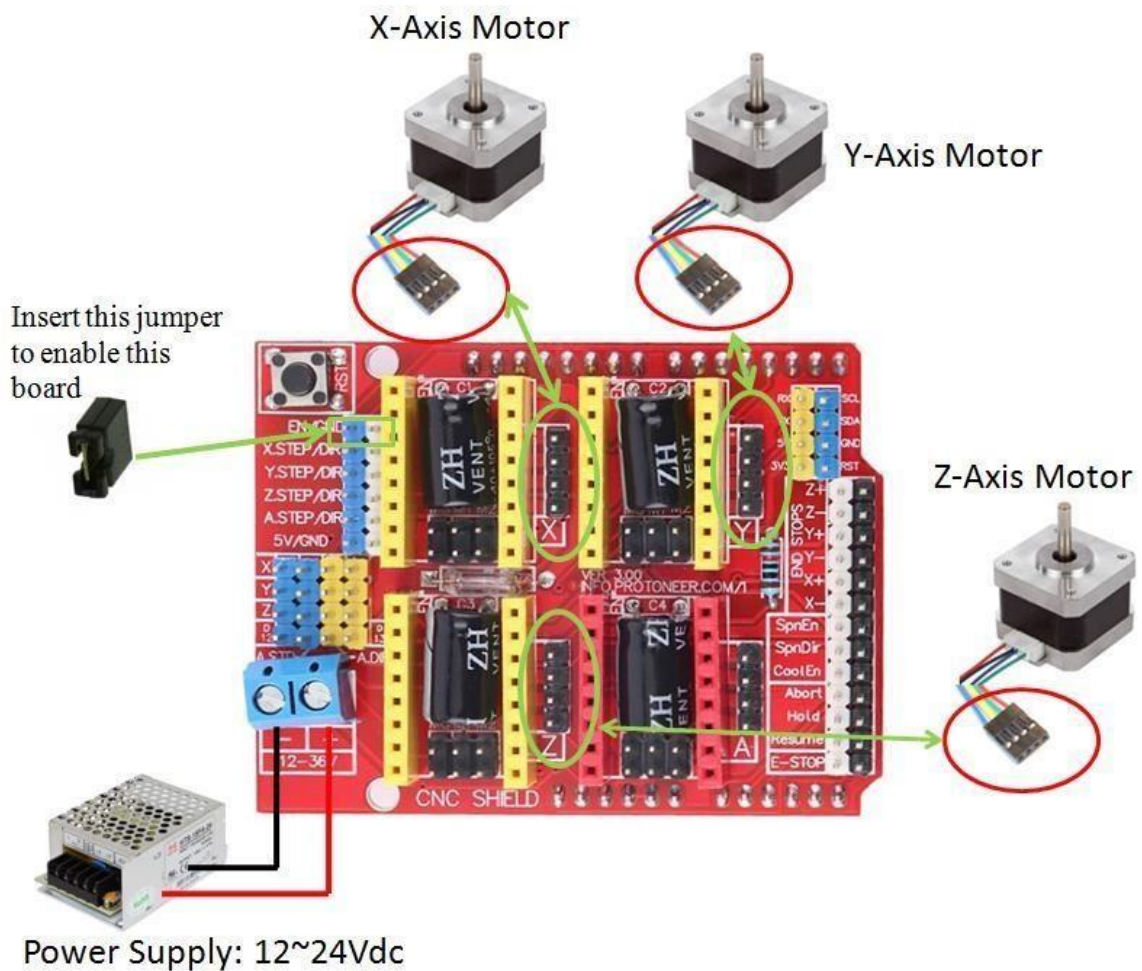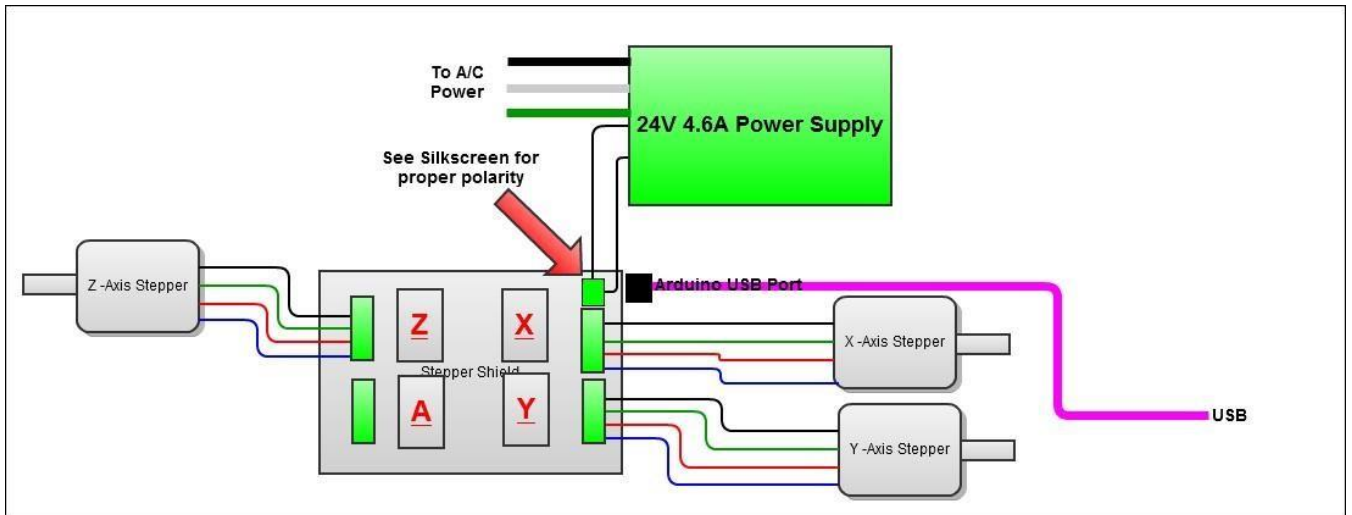

Your CNC Shield board is now ready to go for a test run, let's try to turn the motor as to our instruction !!

4. G-Code Sender


To send commands to your CNC/3-axis stepper motor driver board you need a g-code sender to send command and instruction.

[Download the Universal-G-Code-Sender.](#)


Universal GcodeSender is a Java based GRBL compatible cross platform G-Code sender. Use this program to run a GRBL controlled CNC machine. Once downloaded, connect the UNO board USB to your computer and take note of the COM port it is connected to.

Run the *start-windows.bat* or the *JAR* file directly.

You will be presented with the following screen:

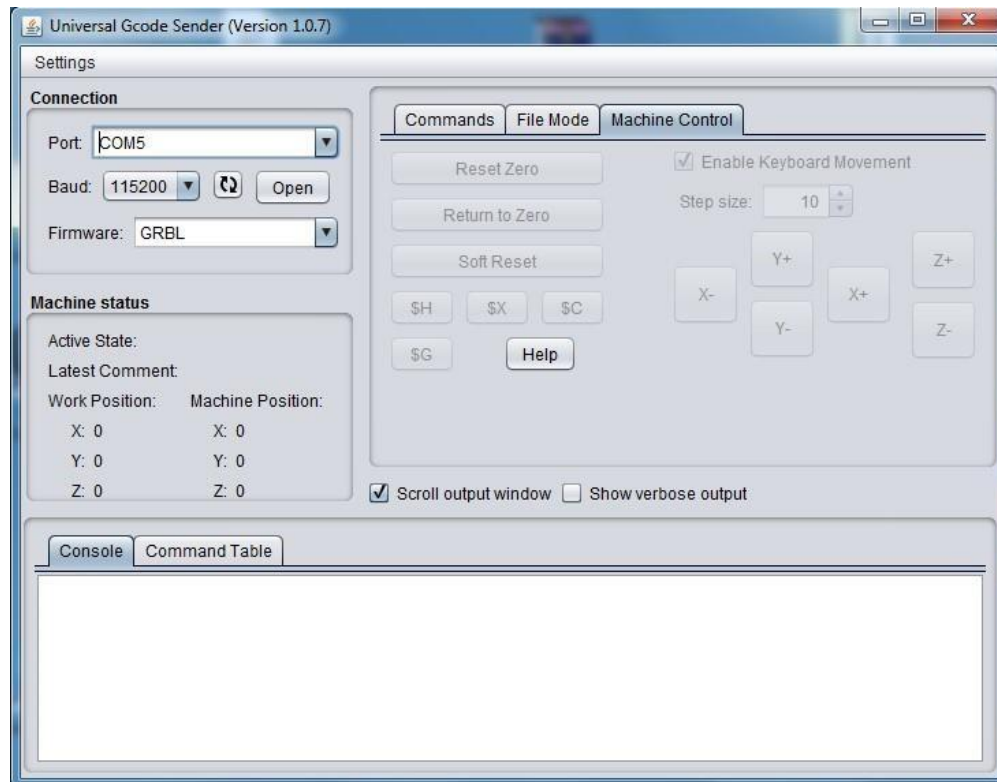

Click the “Machine Control” tab. Select the “Port” number which your Arduino board is attached to. Select 115200 as the Baud rate as this is the speed configured in “GRBL” firmware. Click “Open” button to start the communication for controlling this shield board.

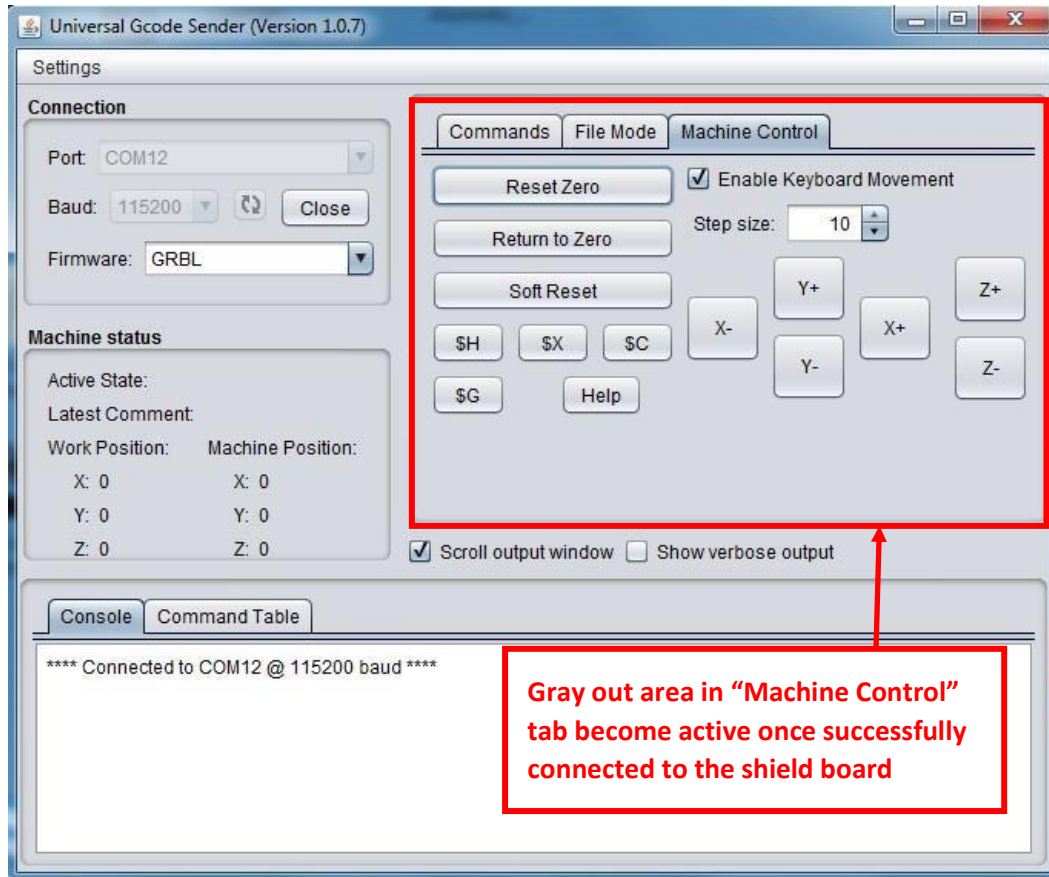

Now, you are ready to control the XYZ stepper motor connected to shield board. Click X+ or X- for example, the stepper motor attached to X terminal will turn in forward or reverse direction.

This will complete our initial setup for driving 3-axis stepper motor connected to this shield board with "GRBL" loaded to Arduino controller board using "Universal G-Code Sender" user interface.

5. Recommended Driver Board & Accessory

- [CNC/3-Axis Stepper Motor Driver Shield for Arduino Board](#)
- [A4988 Stepper Motor Driver Module](#)
- [GT2 Pulley 5mm Bore](#)
- [5mm to 8mm Motor Shaft Coupler](#)



Handsontec.com
We have the parts for your ideas.

HandsOn Technology provides a multimedia and interactive platform for everyone interested in electronics. From beginner to diehard, from student to lecturer. Information, education, inspiration and entertainment. Analog and digital, practical and theoretical; software and hardware.



HandsOn Technology support Open Source Hardware (OSHW) Development Platform.

Learn : Design : Share

www.handsontec.com

The Face behind our product quality...

In a world of constant change and continuous technological development, a new or replacement product is never far away – and they all need to be tested.

Many vendors simply import and sell without checks and this cannot be the ultimate interests of anyone, particularly the customer. Every part sell on Handsotec is fully tested. So when buying from Handsontec products range, you can be confident you're getting outstanding quality and value.

We keep adding the new parts so that you can get rolling on your next project.



www.handsontec.com

[Breakout Boards & Modules](#)



[Connectors](#)



www.handsontec.com

[Electro-Mechanical Parts](#)



www.handsontec.com

[Engineering Material](#)



www.handsontec.com

[Mechanical Hardware](#)



[Electronics Components](#)

P



www.handsontec.com

[Power Supply](#)



[Arduino Board & Shield](#)

[Tools & Accessory](#)



www.handsontec.com

[Tools & Accessory](#)