








RT-2 Smart Trolley Installation Instructions


Manifest:

Image	name	quantity
--------------	-------------	-----------------

	TT motor fixing bracket	8 pcs
	20-cell tachymeter disc	4 pcs
	Trolley frame	2 pieces
	130 strong magnetic geared motor	4 pcs
	69MM DIAMETER YELLOW RUBBER WHEELS	4 pcs
	30MM HIGH COPPER PILLAR	6 pcs
	30MM RECTANGULAR ROUND HEAD M3 SCREWS	8 pcs


	8MM LONG ROUND HEAD M3 SCREW	6 pcs
	M3 nut	16 pcs

Installation step 1: Open the package, you will see a layer of yellow dust paper on the trolley frame, TT motor fixing frame, and tachymeter disc, first we need to tear this layer of dust paper.

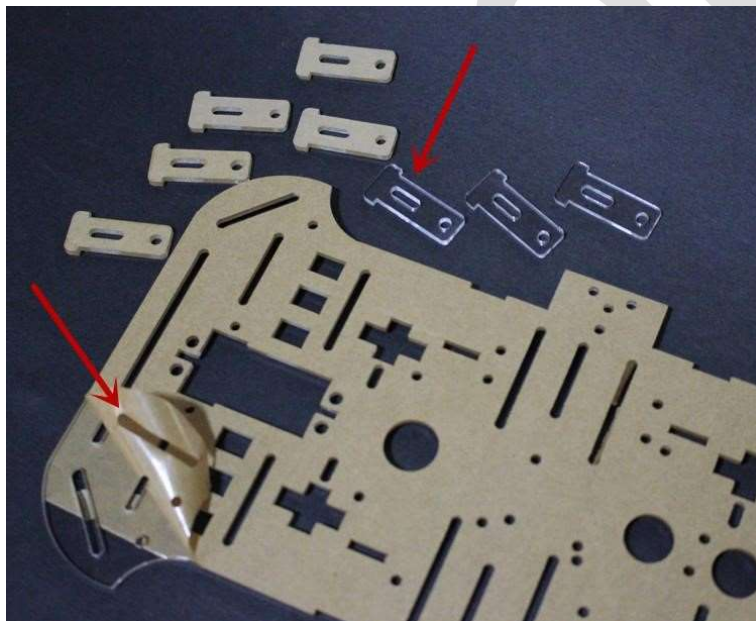

INSTALLATION STEP



2: PREPARE 8 30MM ROUND HEAD SCREWS, 8 M3 NUTS, 8 TT Motor Holders, and 4 130 Strong Magnetic Geared Motors

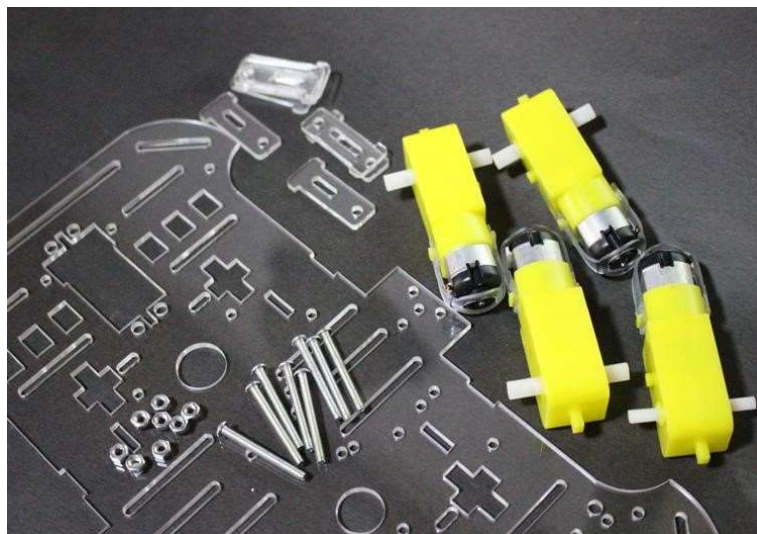


Installation step 3: Install 4 x 20 grid tachymeter discs on 4 x 130 strong magnetic geared motors




INSTALLATION STEP 4: INSTALL ONE TT MOTOR MOUNT ON THE TROLLEY FRAME FIRST, THEN INSTALL THE OTHER TT MOTOR MOUNT ON THE MOTOR WITH 2 30MM SCREWS, AND FIX IT WITH 2 NUTS ON THE TROLLEY FRAME.

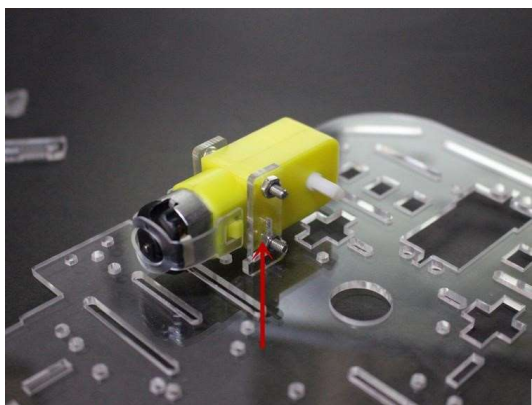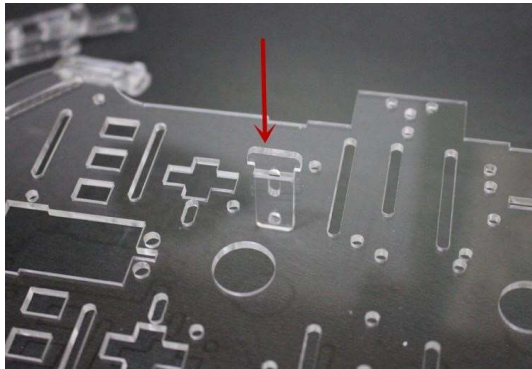

Installation step 5: Install 4 yellow rubber wheels on 4 motor shafts

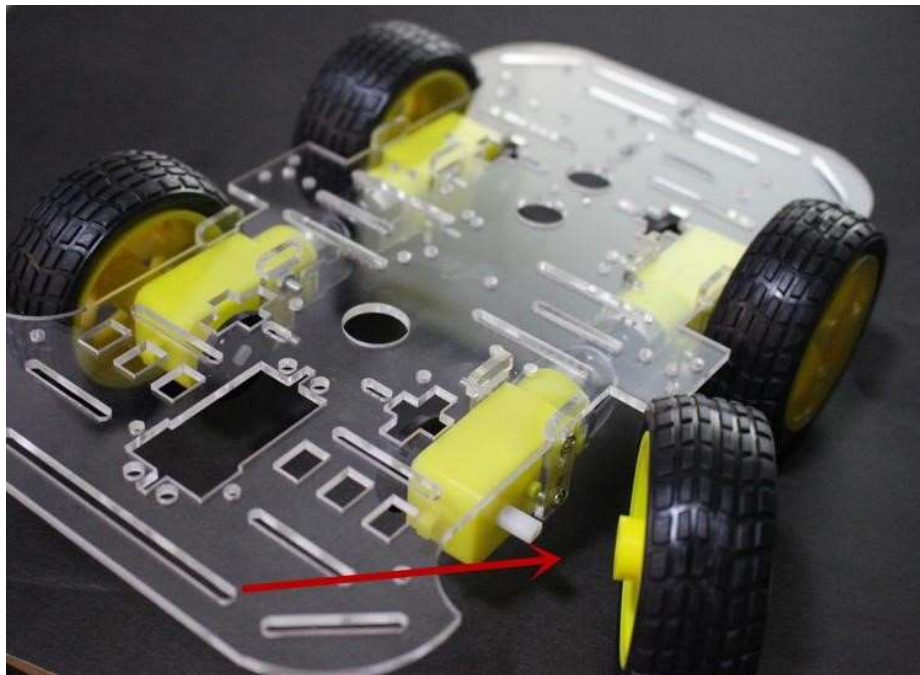

INSTALLATION STEP 6: INSTALL 6 30MM LONG COPPER PILLARS WITH 6 M3 NUTS ON THE TROLLEY FRAME

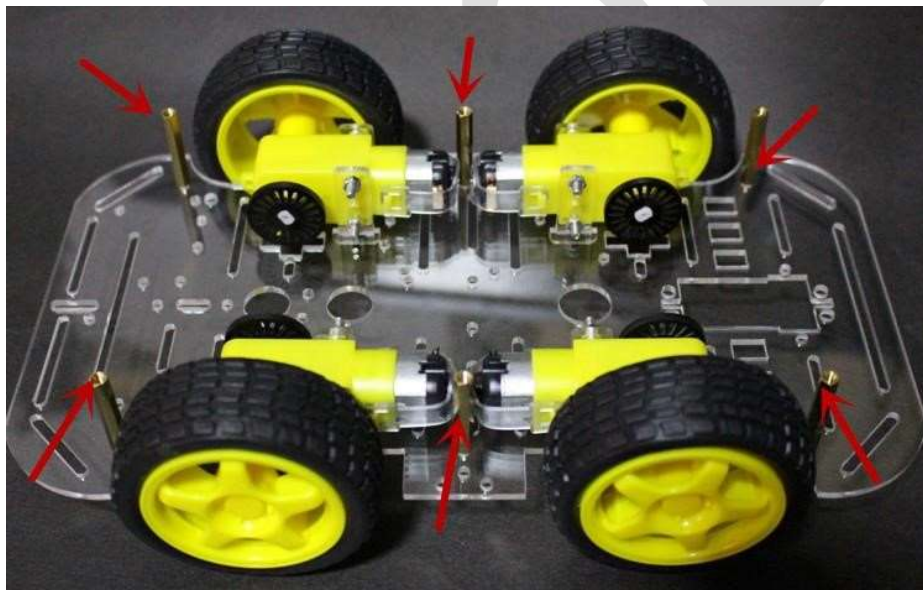

**INSTALLATION STEP 7: PUT ANOTHER 1 TROLLEY FRAME
ON 6 30MM COPPER PILLARS AND FIX IT WITH 6
SCREWS.**



The installation is complete



RTrobot