

MAX30100

General Description

The MAX30100 is an integrated pulse oximetry and heart rate monitor sensor solution. It combines two LEDs, a photodetector, optimized optics, and low-noise analog signal processing to detect pulse oximetry and heart-rate signals.

The MAX30100 operates from 1.8V and 3.3V power supplies and can be powered down through software with negligible standby current, permitting the power supply to remain connected at all times.

Applications

- Wearable Devices
- Fitness Assistant Devices
- Medical Monitoring Devices

for Wearable Health

Pulse Oximeter and Heart-Rate Sensor IC

Solution Simplifies Design


- Integrated LEDs, Photo Sensor, and High-Performance Analog Front -End
- Tiny 5.6mm x 2.8mm x 1.2mm 14-Pin Optically Enhanced System-in-Package
- Ultra-Low-Power Operation Increases Battery Life for Wearable Devices
 - Programmable Sample Rate and LED Current for Power Savings
 - Ultra-Low Shutdown Current (0.7 μ A, typ)
- Advanced Functionality Improves Measurement Performance
 - High SNR Provides Robust Motion Artifact Resilience
 - Integrated Ambient Light Cancellation
 - High Sample Rate Capability
 - Fast Data Output Capability

Benefits and Features

- Complete Pulse Oximeter and Heart-Rate Sensor

Ordering Information appears at end of data sheet.

System Block Diagram

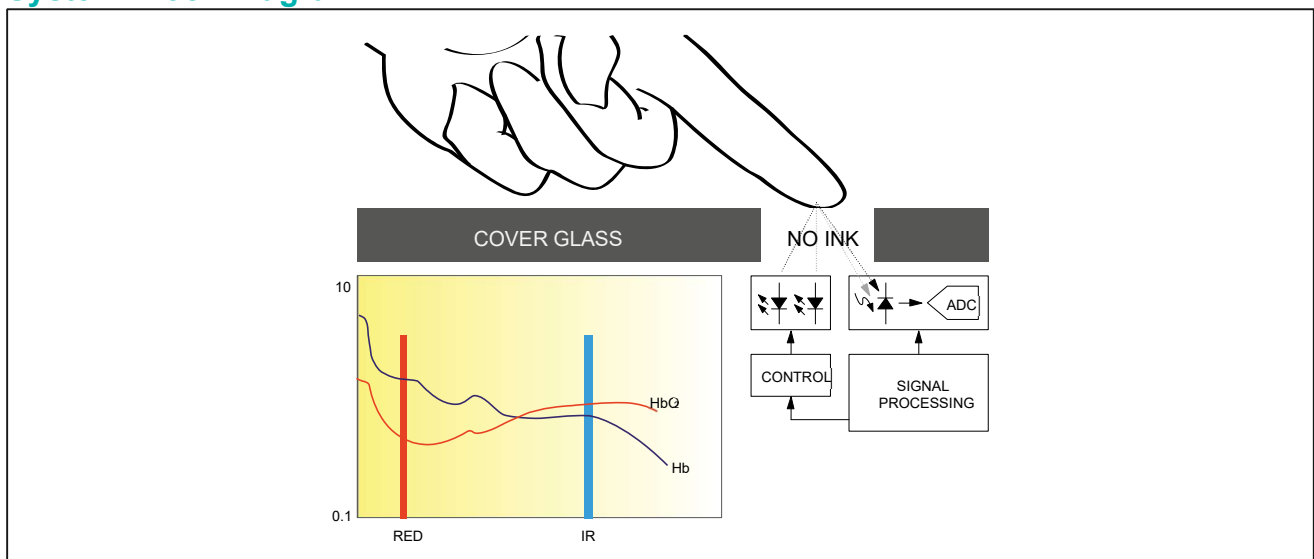

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

Absolute Maximum Ratings

VDD to GND	-0.3V to +2.2V
GND to PGND	-0.3V to +0.3V
x_DRV, x_LED+ to PGND	-0.3V to +6.0V
All Other Pins to GND	-0.3V to +6.0V
Output Short-Circuit Current Duration	Continuous
Continuous Input Current into Any Terminal	±20mA

Ambient

Junction-to-

al

Therm

e

Resistanc

(θ_{JA})150°C/W

Junction-to-Case Thermal Resistance (θ_{JC})

.....170°C/W Continuous Power Dissipation ($T_A = +70^\circ\text{C}$)

OESIP (derate 5.8mW/°C above +70°C)464mW

Operating Temperature Range -40°C to +85°C

Soldering Temperature (reflow)+260°C

Storage Temperature Range -40°C to +105°C

Package Thermal Characteristics (Note 1)

OESIP

Note 1: Package thermal resistances were obtained using the method described in JEDEC specification JESD51-7, using a four-layer board. For detailed information on package thermal considerations, refer to www.maximintegrated.com/thermal-tutorial.

Electrical Characteristics

(VDD = 1.8V, VIR_LED+ = VR_LED+ = 3.3V, TA = +25°C, min/max are from TA = -40°C to +85°C, unless otherwise noted.) (Note 2)

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
POWER SUPPLY						
Power-Supply Voltage	VDD	Guaranteed by RED and IR count tolerance	1.7	1.8	2.0	V
LED Supply Voltage (R_LED+ or IR_LED+ to PGND)	VLED+	Guaranteed by PSRR of LED Driver	3.1	3.3	5.0	V
Supply Current	IDD	SpO2 and heart rate modes, PW = 200µs, 50sps		600	1200	µA
		Heart rate only mode, PW = 200µs, 50sps		600	1200	
Supply Current in Shutdown	ISHDN	TA = +25°C, MODE = 0x80		0.7	10	µA
SENSOR CHARACTERISTICS						
ADC Resolution				14		bits
Red ADC Count (Note 3)	REDC	Propriety ATE setup RED_PA = 0x05, LED_PW = 0x00, SPO2_SR = 0x07, TA = +25°C	23,000	26,000	29,000	Counts
IR ADC Count (Note 3)	IRC	Propriety ATE setup IR_PA = 0x09, LED_PW = 0x00, SPO2_SR = 0x07, TA = +25°C	23,000	26,000	29,000	Counts
Dark Current Count	DCC	RED_PA = IR_PA = 0x00, LED_PW = 0x03, SPO2_SR = 0x01		0	3	Counts
DC Ambient Light Rejection (Note 4)	ALR	Number of ADC counts with finger on sensor		0		Counts
						RED LED

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

		under direct sunlight (100K lux) LED_PW = 0x03, SPO2_SR = 0x01	IR LED	0	
--	--	---	--------	---	--

Electrical Characteristics (continued)

(VDD = 1.8V, VIR_LED+ = VR_LED+ = 3.3V, TA = +25°C, min/max are from TA = -40°C to +85°C, unless otherwise noted.) (Note 2)

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
IR ADC Count—PSRR (VDD)	PSRRVDD	Propriety ATE setup 1.7V < VDD < 2.0V, LED_PW = 0x03, SPO2_SR = 0x01, IR_PA = 0x09, IR_PA = 0x05, TA = +25°C		0.25	2	%
		Frequency = DC to 100kHz, 100mVP-P		10		LSB
RED/IR ADC Count—PSRR (X_LED+)	PSRRLED	Propriety ATE setup 3.1V < X_LED+ < 5V, LED_PW = 0x03, SPO2_SR = 0x01, IR_PA = 0x09, IR_PA = 0x05, TA = +25°C		0.05	2	%
		Frequency = DC to 100kHz, 100mVP-P		10		LSB
ADC Integration Time	INT	LED_PW = 0x00		200		µs
		LED_PW = 0x03		1600		µs
IR LED CHARACTERISTICS (Note 4)						
LED Peak Wavelength	λP	ILED = 20mA, TA = +25°C	870	880	900	nm
Full Width at Half Max	Δλ	ILED = 20mA, TA = +25°C		30		nm
Forward Voltage	VF	ILED = 20mA, TA = +25°C		1.4		V
Radiant Power	PO	ILED = 20mA, TA = +25°C		6.5		mW
RED LED CHARACTERISTICS (Note 4)						
LED Peak Wavelength	λP	ILED = 20mA, TA = +25°C	650	660	670	nm
Full Width at Half Max	Δλ	ILED = 20mA, TA = +25°C		20		nm
Forward Voltage	VF	ILED = 20mA, TA = +25°C		2.1		V
Radiant Power	PO	ILED = 20mA, TA = +25°C		9.8		mW

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

TEMPERATURE SENSOR				
Temperature ADC Acquisition Time	TT	TA = +25°C	29	ms
Temperature Sensor Accuracy	TA	TA = +25°C	±1	°C
Temperature Sensor Minimum Range	TMIN		-40	°C
Temperature Sensor Maximum Range	TMAX		85	°C

Electrical Characteristics (continued)

(VDD = 1.8V, VIR_LED+ = VR_LED+ = 3.3V, TA = +25°C, min/max are from TA = -40°C to +85°C, unless otherwise noted.) (Note 2)

PARAMETER	SYMBOL	CONDITIONS	MIN	TYP	MAX	UNITS
DIGITAL CHARACTERISTICS (SDA, SDA, INT)						
Output Low Voltage SDA, INT	VOL	ISINK = 6mA			0.4	V
I2C Input Voltage Low	VIL_I2C	SDA, SCL			0.4	V
I2C Input Voltage High	VIH_I2C	SDA, SCL	1.4			V
Input Hysteresis	VHYS	SDA, SCL		200		mV
Input Capacitance	CIN	SDA, SCL		10		pF
Input Leakage Current	IIN	VIN = 0V, TA = +25°C (SDA, SCL, INT)		0.01	1	µA
		VIN = 5.5V, TA = +25°C (SDA, SCL, INT)		0.01	1	µA
I²C TIMING CHARACTERISTICS (SDA, SDA, INT)						
I2C Write Address				AE		Hex
I2C Read Address				AF		Hex
Serial Clock Frequency	fSCL		0		400	kHz
Bus Free Time Between STOP and START Conditions	tBUF		1.3			µs

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

Hold Time (Repeated) START Condition	$t_{HD,START}$		0.6	μs
SCL Pulse-Width Low	t_{LOW}		1.3	μs
SCL Pulse-Width High	t_{HIGH}		0.6	μs
Setup Time for a Repeated START Condition	$t_{SU,START}$		0.6	μs
Data Hold Time	$t_{HD,DAT}$		0	900
Data Setup Time	$t_{SU,DAT}$		100	ns
Setup Time for STOP Condition	$t_{SU,STOP}$		0.6	μs
Pulse Width of Suppressed Spike	t_{SP}		0	50
Bus Capacitance	CB			400
SDA and SCL Receiving Rise Time	t_R		$20 + 0.1CB$	300
SDA and SCL Receiving Fall Time	t_{RF}		$20 + 0.1CB$	300
SDA Transmitting Fall Time	t_{TF}		$20 + 0.1CB$	300

Note 2: All devices are 100% production tested at $T_A = +25^\circ C$. Specifications over temperature limits are guaranteed by Maxim Integrated's bench or proprietary automated test equipment (ATE) characterization.

Note 3: Specifications are guaranteed by Maxim Integrated's bench characterization and by 100% production test using proprietary ATE setup and conditions.

Note 4: For design guidance only. Not production tested.




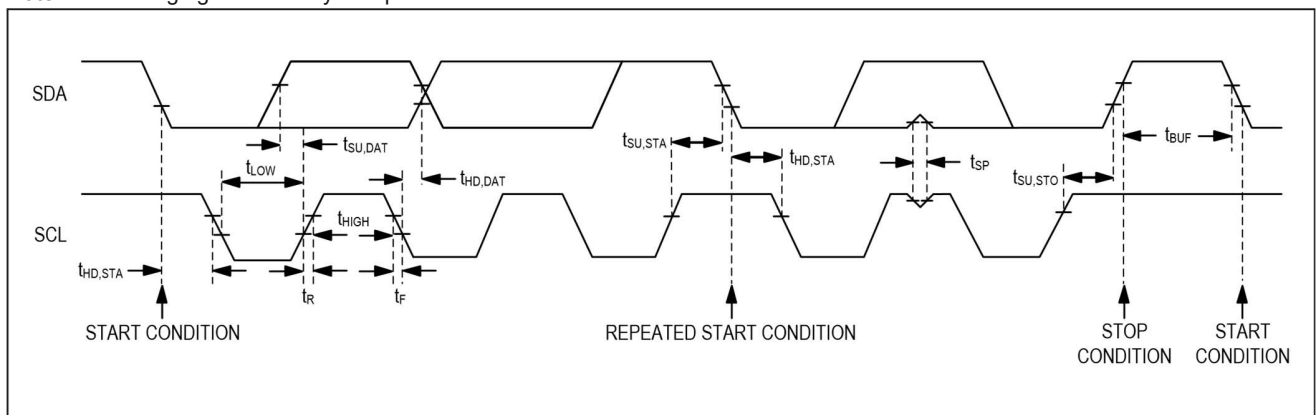


Figure 1. I²C-Compatible Interface Timing Diagram


MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

Typical Operating Characteristics

(VDD = 1.8V, VIR_LED+ = VR_LED+ = 3.3V, TA = +25°C, unless otherwise noted.)

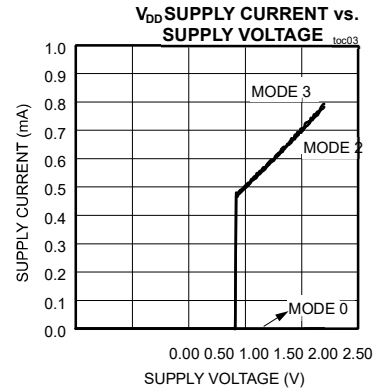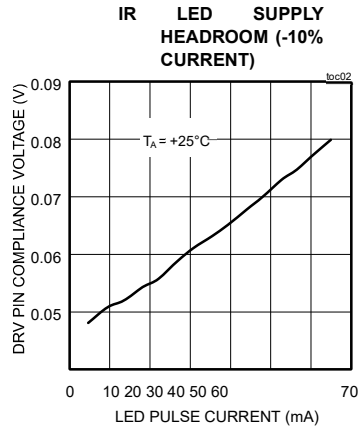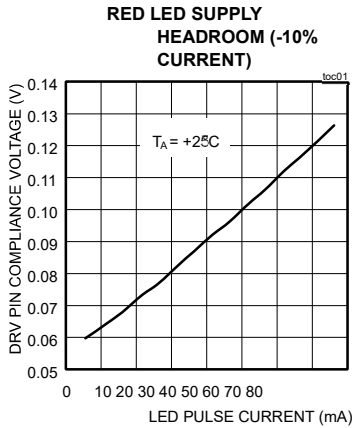


DC COUNTS vs. DISTANCE FOR WHITE HIGH IMPACT STYRENE CARD





VDD SHUTDOWN CURRENT vs. TEMPERATURE

TEMPERATURE ($^\circ\text{C}$)

LED SHUTDOWN CURRENT vs. TEMPERATURE

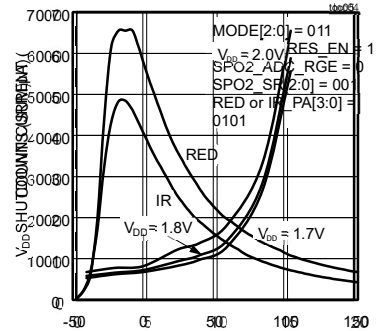


ON-BOARD TEMPERATURE vs. ERROR

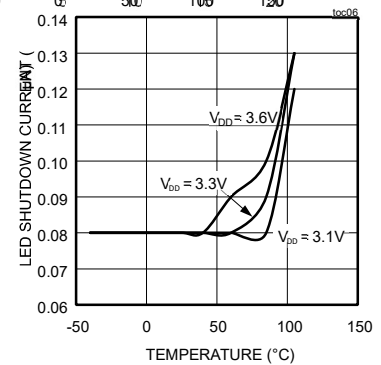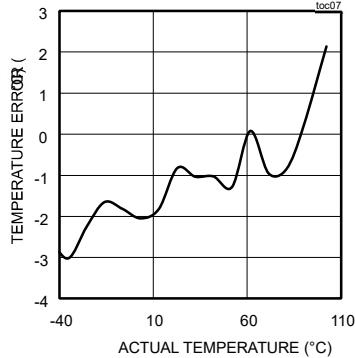

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

RED LED SPECTRA at +30°C


WAVELENGTH (nm)

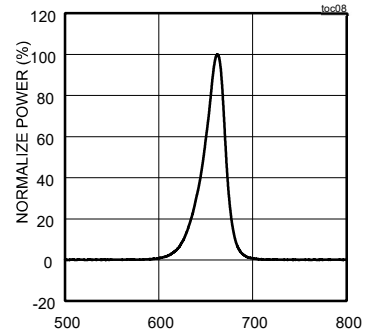


Typical Operating Characteristics (continued)

(VDD = 1.8V, VIR_LED+ = VR_LED+ = 3.3V, TA = +25°C, unless otherwise noted.)


IR LED SPECTRA at +30°C

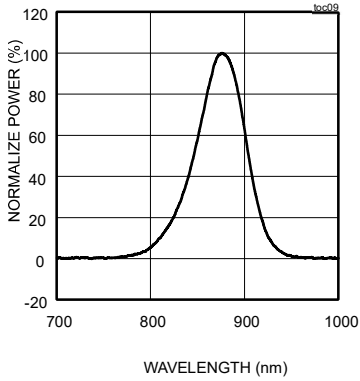


RED LED WAVELENGTH vs. TEMPERATURE AT LED CURRENT = 25mA

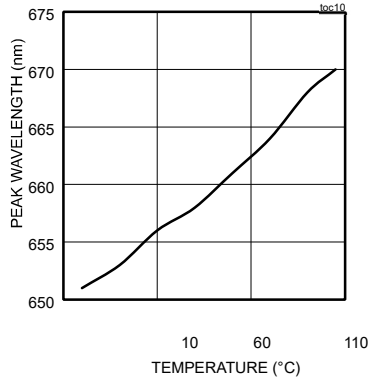


IR LED WAVELENGTH vs. TEMPERATURE AT LED CURRENT = 25mA

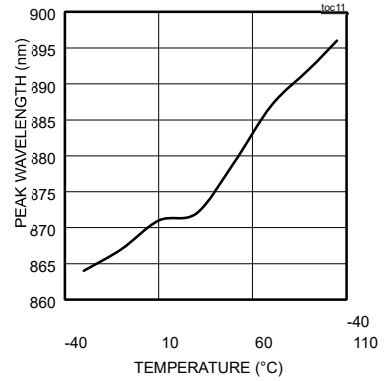

RED LED FORWARD VOLTAGE vs. FORWARD CURRENT

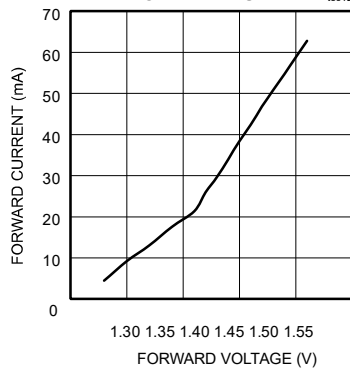


IR LED FORWARD VOLTAGE vs. FORWARD CURRENT

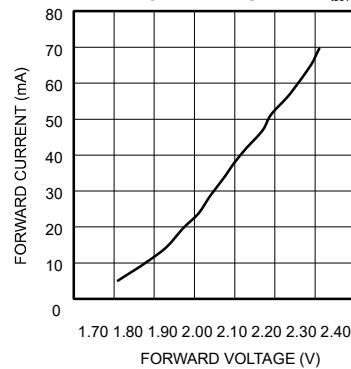

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

Pin Configuration

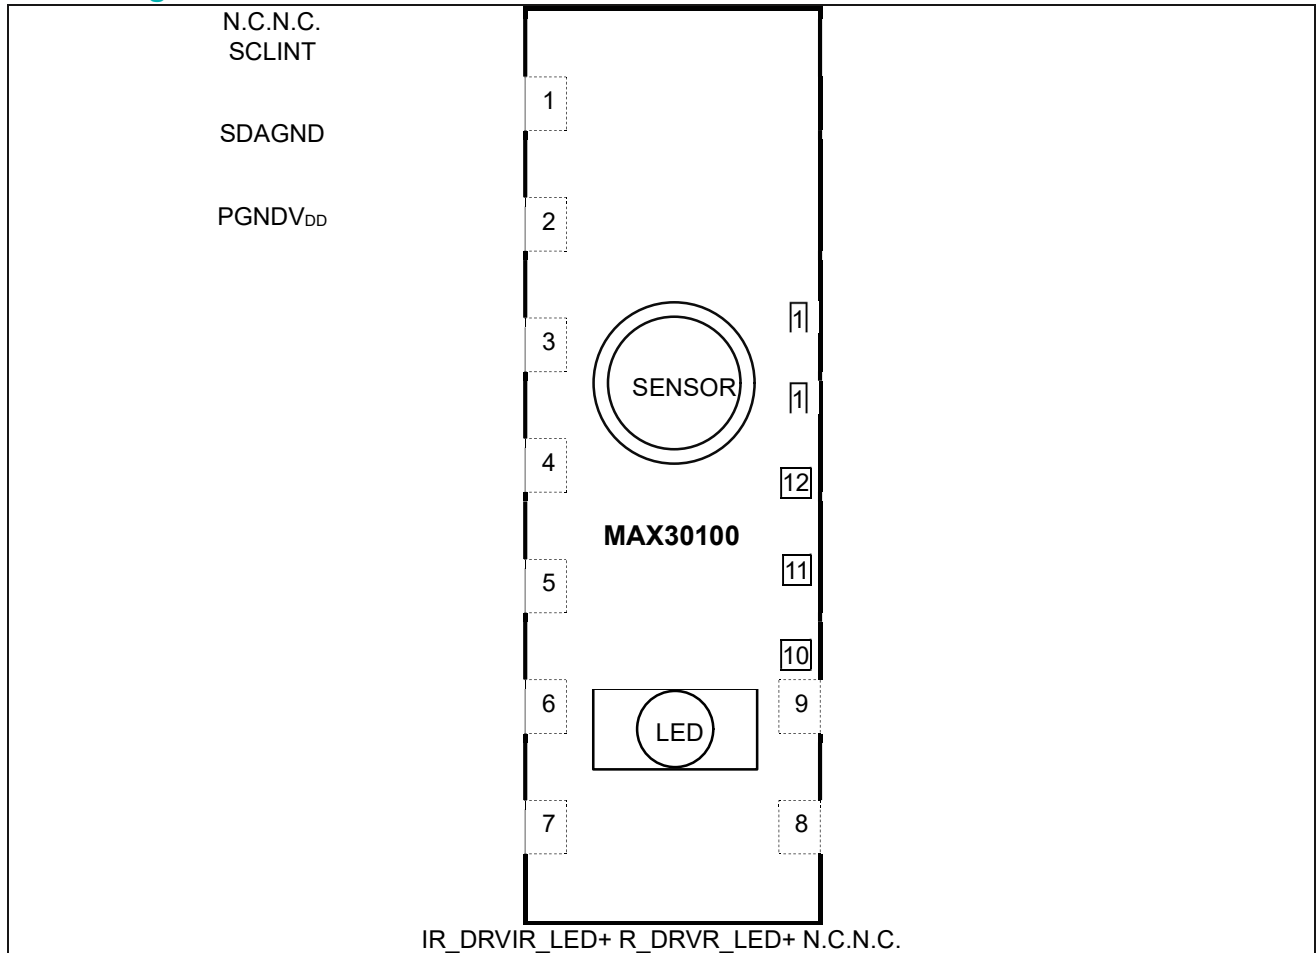


Pin Description

PIN	NAME	FUNCTION
1, 7, 8, 14	N.C.	No Connection. Connect to PCB Pad for Mechanical Stability.
2	SCL	I ² C Clock Input
3	SDA	I ² C Clock Data, Bidirectional (Open-Drain)
4	PGND	Power Ground of the LED Driver Blocks
5	IR_DRV	IR LED Cathode and floating in circuit.
6	R_DRV	Red LED Cathode and floating in circuit.

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

9	R_LED+	Power Supply (Anode Connection) for Red LED. Bypass to PGND for best performance. Connected to IR_LED+ internally.
10	IR_LED+	Power Supply (Anode Connection) for IR LED. Bypass to PGND for best performance. Connected to R_LED+ internally.
11	VDD	Analog Power Supply Input. Bypass to GND for best performance.
12	GND	Analog Ground
13	INT	Active-Low Interrupt (Open-Drain)

Functional Diagram

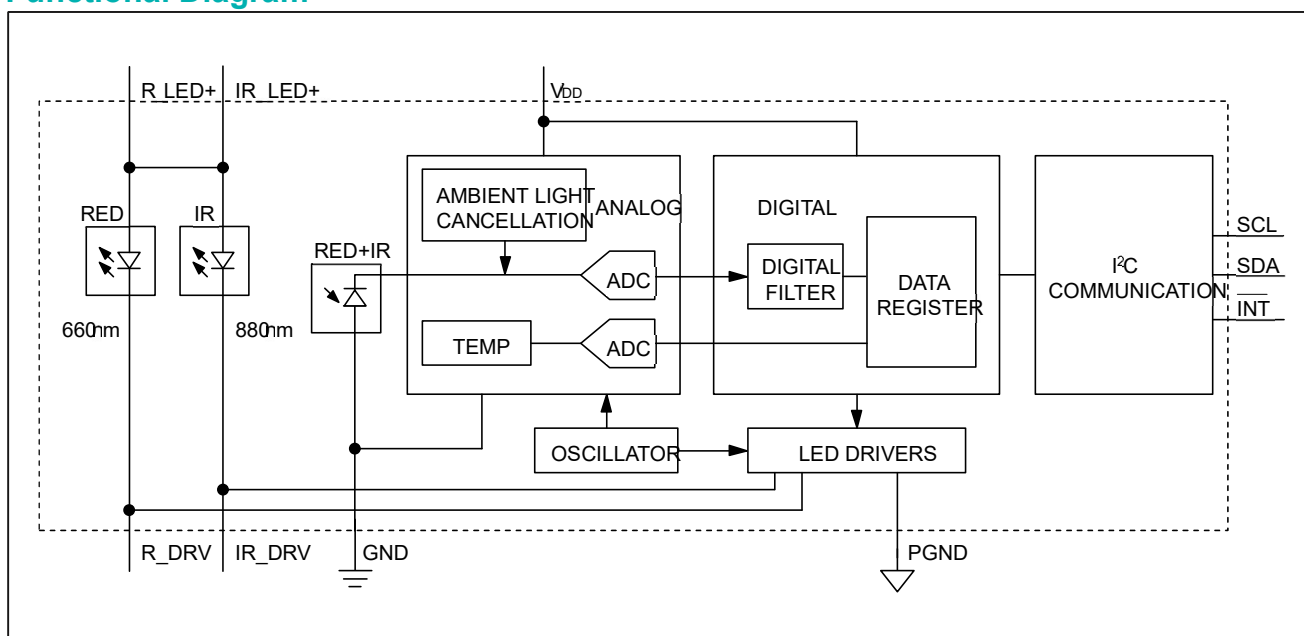

Detailed Description

The MAX30100 is a complete pulse oximetry and heart rate sensor system solution designed for the demanding requirements of wearable devices. The MAX30100 provides very small total solution size without sacrificing optical or electrical performance. Minimal external hardware components are needed for integration into a wearable device.

The MAX30100 is fully configurable through software registers, and the digital output data is stored in a 16-deep FIFO within the device. The FIFO allows the MAX30100 to be connected to a microcontroller or microprocessor on a shared bus, where the data is not being read continuously from the device's registers.

SpO₂ Subsystem

The SpO₂ subsystem in the MAX30100 is composed of ambient light cancellation (ALC), 16-bit sigma delta ADC, and proprietary discrete time filter.

The SpO₂ ADC is a continuous time oversampling sigma delta converter with up to 16-bit resolution. The ADC output data rate can be programmed from 50Hz to 1kHz. The MAX30100 includes a proprietary discrete time filter to reject 50Hz/60Hz interference and low-frequency residual ambient noise.

Temperature Sensor

The MAX30100 has an on-chip temperature sensor for (optionally) calibrating the temperature dependence of the SpO₂ subsystem.

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

The SpO₂ algorithm is relatively insensitive to the wavelength of the IR LED, but the red LED's wavelength is critical to correct interpretation of the data. The temperature sensor data can be used to compensate the SpO₂ error with ambient temperature changes.

LED Driver

The MAX30100 integrates red and IR LED drivers to drive LED pulses for SpO₂ and HR measurements. The LED current can be programmed from 0mA to 50mA (typical only) with proper supply voltage. The LED pulse width can be programmed from 200µs to 1.6ms to optimize measurement accuracy and power consumption based on use cases.

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

Table 1. Register Maps and Descriptions

REGISTER	B7	B6	B5	B4	B3	B2	B1	B0	REG ADDR	POR STATE	R/W
STATUS											
Interrupt Status	A_FULL	TEMP_RDY	HR_RDY	SPO2_RDY				PWR_RDY	0x00	0X00	R
Interrupt Enable	ENB_A_FULL	ENB_TEMP_RDY	ENB_HR_RDY	ENB_SPO2_RDY					0x01	0X00	R/W
FIFO											
FIFO Write Pointer					FIFO_WR_PTR[3:0]				0x02	0x00	R/W
Over Flow Counter					OVF_COUNTER[3:0]				0x03	0x00	R/W
FIFO Read Pointer					FIFO_RD_PTR[3:0]				0x04	0x00	R/W
FIFO Data Register	FIFO_DATA[7:0]								0x05	0x00	R/W
CONFIGURATION											
Mode Configuration	SHDN	RESET			TEMP_EN	MODE[2:0]			0x06	0x00	R/W
SPO2 Configuration		SPO2_HI_RES_EN	RESERVED	SPO2_SR[2:0]		LED_PW[1:0]			0x07	0x00	R/W
RESERVED									0x08	0x00	R/W
LED Configuration	RED_PA[3:0]			IR_PA[3:0]					0x09	0x00	R/W
RESERVED									0x0A – 0x15	0x00	R/W
TEMPERATURE											
Temp_Integer	TINT[7:0]								0x16	0x00	R/W
Temp_Fraction					TFRAC[3:0]				0x17	0x00	R/W
RESERVED									0x8D	0x00	R/W
PART ID											

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

Revision ID	REV_ID[7:0]	0xFE	0xXX*	R
Part ID	PART_ID[7]	0xFF	0x11	R/W

*XX denotes any 2-digit hexadecimal number (00 to FF). Contact Maxim Integrated for the Revision ID number assigned for your product.

Interrupt Status (0x00)

REGISTER	B7	B6	B5	B4	B3	B2	B1	B0	REG ADDR	POR STATE	R/W
Interrupt Status	A_FULL	TEMP_RDY	HR_RDY	SPO2_RDY				PWR_RDY	0x00	0x00	R

There are 5 interrupts and the functionality of each is exactly the same: pulling the active-low interrupt pin into its low state until the interrupt is cleared.

The interrupts are cleared whenever the interrupt status register is read, or when the register that triggered the interrupt is read. For example, if the SpO2 sensor triggers an interrupt due to finishing a conversion, reading either the FIFO data register or the interrupt register clears the interrupt pin (which returns to its normal high state), and also clears all the bits in the interrupt status register to zero.

Bit 7: FIFO Almost Full Flag (A_FULL)

In SpO2 and heart-rate modes, this interrupt triggers when the FIFO write pointer is the same as the FIFO read pointer minus one, which means that the FIFO has only one unwritten space left. If the FIFO is not read within the next conversion time, the FIFO becomes full and future data is lost.

Bit 6: Temperature Ready Flag (TEMP_RDY)

When an internal die temperature conversion is finished, this interrupt is triggered so the processor can read the temperature data registers.

Bit 5: Heart Rate Data Ready (HR_RDY)

In heart rate or SPO2 mode, this interrupt triggers after every data sample is collected. A heart rate data sample consists of one IR data point only. This bit is automatically cleared when the FIFO data register is read.

Bit 4: SpO2 Data Ready (SPO2_RDY)

In SpO2 mode, this interrupt triggers after every data sample is collected. An SpO2 data sample consists of one IR and one red data points. This bit is automatically cleared when the FIFO data register is read. **Bit 3: RESERVED**

This bit should be ignored and always be zero in normal operation.

Bit 2: RESERVED

This bit should be ignored and always be zero in normal operation.

Bit 1: RESERVED

This bit should be ignored and always be zero in normal operation.

Bit 0: Power Ready Flag (PWR_RDY)

On power-up or after a brownout condition, when the supply voltage VDD transitions from below the UVLO voltage to above the UVLO voltage, a power-ready interrupt is triggered to signal that the IC is powered up and ready to collect data.

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

Maxim Integrated |

Interrupt Enable (0x01)

REGISTER	B7	B6	B5	B4	B3	B2	B1	B0	REG ADDR	POR STATE	R/W
Interrupt Enable	ENB_A_FULL	ENB_TE_P_RDY	ENB_HR_RDY	ENB_S_O2_RDY					0x01	0X00	R/W

Each source of hardware interrupt, with the exception of power ready, can be disabled in a software register within the MAX30100 IC. The power-ready interrupt cannot be disabled because the digital state of the MAX30100 is reset upon a brownout condition (low power-supply voltage), and the default state is that all the interrupts are disabled. It is important for the system to know that a brownout condition has occurred, and the data within the device is reset as a result.

When an interrupt enable bit is set to zero, the corresponding interrupt appears as 1 in the interrupt status register, but the INT pin is not pulled low.

The four unused bits (B3:B0) should always be set to zero (disabled) for normal operation. **FIFO (0x02–0x05)**

REGISTER	B7	B6	B5	B4	B3	B2	B1	B0	REG ADDR	POR STATE	R/W
FIFO Write Pointer					FIFO_WR_PTR[3:0]				0x02	0x00	R/W
Over Flow Counter					OVF_COUNTER[3:0]				0x03	0x00	R/W
FIFO Read Pointer					FIFO_RD_PTR[3:0]				0x04	0x00	R/W
FIFO Data Register	FIFO_DATA[7:0]								0x05	0x00	R/W

FIFO Write Pointer

The FIFO write pointer points to the location where the MAX30100 writes the next sample. This pointer advances for each sample pushed on to the FIFO. It can also be changed through the I2C interface when MODE[2:0] is nonzero.

FIFO Overflow Counter

When the FIFO is full, samples are not pushed on to the FIFO, samples are lost. OVF_COUNTER counts the number of samples lost. It saturates at 0xF. When a complete sample is popped from the FIFO (when the read pointer advances), OVF_COUNTER is reset to zero.

FIFO Read Pointer

The FIFO read pointer points to the location from where the processor gets the next sample from the FIFO via the I2C interface. This advances each time a sample is popped from the FIFO. The processor can also write to this pointer after reading the samples, which would allow rereading samples from the FIFO if there is a data communication error.

FIFO Data

The circular FIFO depth is 16 and can hold up to 16 samples of SpO2 channel data (Red and IR). The FIFO_DATA register in the I2C register map points to the next sample to be read from the FIFO. FIFO_RD_PTR points to this sample. Reading FIFO_DATA register does not automatically increment the register address; burst reading this register reads the same address over and over. Each sample is 4 bytes of data, so this register has to be read 4 times to get one sample.

The above registers can all be written and read, but in practice, only the FIFO_RD_PTR register should be written to in operation. The others are automatically incremented or filled with data by the MAX30100. When starting a new SpO2

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

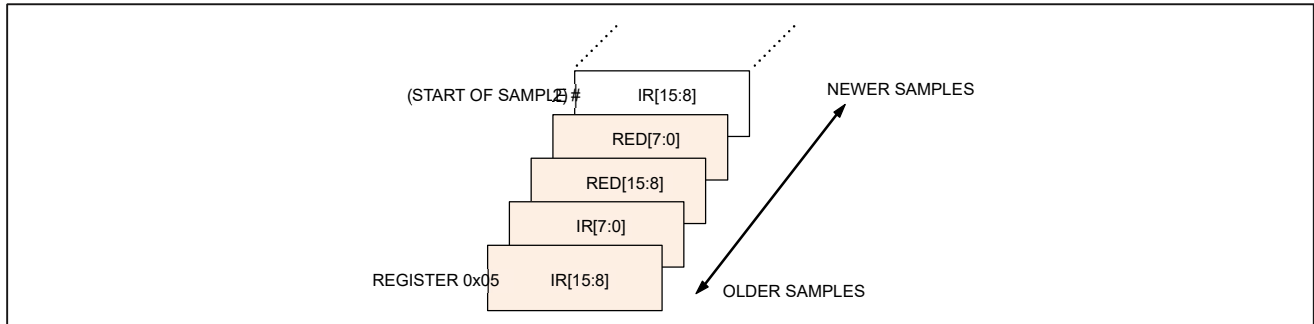


Figure 2. Graphical Representation of the FIFO Data Register

The locations to store new data, and the read pointer for reading data, are used to control the flow of data in the FIFO. The write pointer increments every time a new sample is added to the FIFO. The read pointer is incremented automatically every time a sample is read from the FIFO. To reread a sample from the FIFO, decrement its value by one and read the data register again.

The SpO2 write/read pointers should be cleared (back to 0x0) upon entering SpO2 mode or heart-rate mode, so that there is no old data represented in the FIFO. The pointers are not automatically cleared when changing modes, but they are cleared if VDD is power cycled so that the VDD voltage drops below its UVLO voltage.

Pseudo-Code Example of Reading Data from FIFO

First transaction: Get the FIFO_WR_PTR:

```
START;
Send device address + write mode
Send address of FIFO_WR_PTR;
REPEATED_START;
Send device address + read mode
Read FIFO_WR_PTR;
STOP;
```

The central processor evaluates the number of samples to be read from the FIFO:

```
NUM_AVAILABLE_SAMPLES = FIFO_WR_PTR - FIFO_RD_PTR
```

(Note: pointer wrap around should be taken into account)

```
NUM_SAMPLES_TO_READ = < less than or equal to NUM_AVAILABLE_SAMPLES > Second
```

transaction: Read NUM_SAMPLES_TO_READ samples from the FIFO:

```
START;
Send device address + write mode
Send address of FIFO_DATA;
REPEATED_START;
Send device address + read mode for (i = 0;
i < NUM_SAMPLES_TO_READ; i++) {
```

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

```

Read FIFO_DATA;
Save IR[15:8];
Read FIFO_DATA;
Save IR[7:0];
Read FIFO_DATA;
Save R[15:8];
Read FIFO_DATA;
Save R[7:0];
    }
STOP;

```

Third transaction: Write to FIFO_RD_PTR register. If the second transaction was successful, FIFO_RD_PTR points to the next sample in the FIFO, and this third transaction is not necessary. Otherwise, the processor updates the FIFO_RD_PTR appropriately, so that the samples are reread.

```

START;
Send device address + write mode
Send address of FIFO_RD_PTR;
Write FIFO_RD_PTR;
STOP;

```

Mode Configuration (0x06)

REGISTER	B7	B6	B5	B4	B3	B2	B1	B0	REG ADDR	POR STATE	R/W
Mode Configuration	SHDN	RESET			TEMP_EN	MODE[2:0]			0x06	0x00	R/W

Bit 7: Shutdown Control (SHDN)

The part can be put into a power-save mode by setting this bit to one. While in power-save mode, all registers retain their values, and write/read operations function as normal. All interrupts are cleared to zero in this mode.

Bit 6: Reset Control (RESET)

When the RESET bit is set to one, all configuration, threshold, and data registers are reset to their power-on-state. The only exception is writing both RESET and TEMP_EN bits to one at the same time since temperature data registers 0x16 and 0x17 are not cleared. The RESET bit is cleared automatically back to zero after the reset sequence is completed.

Bit 3: Temperature Enable (TEMP_EN)

This is a self-clearing bit which, when set, initiates a single temperature reading from the temperature sensor. This bit is cleared automatically back to zero at the conclusion of the temperature reading when the bit is set to one in heart rate or SpO2 mode. **Bits 2:0: Mode Control**

These bits set the operating state of the MAX30100. Changing modes does not change any other setting, nor does it erase any previously stored data inside the data registers.

Table 3. Mode Control

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

MODE[2:0]	MODE
000	Unused
001	Reserved (Do not use)
010	HR only enabled
011	SPO2 enabled
100–111	Unused

SpO2 Configuration (0x07)

REGISTER	B7	B6	B5	B4	B3	B2	B1	B0	REG ADDR	POR STATE	R/W
SPO2 Configuration		SPO2_HI_RES_EN	Reserved	SPO2_SR[2:0]			LED_PW[1:0]		0x07	0x00	R/W

Bit 6: SpO2 High Resolution Enable (SPO2_HI_RES_EN)

Set this bit high. The SpO2 ADC resolution is 16-bit with 1.6ms LED pulse width.

Bit 5: Reserved. Set low (default).

Bit 4:2: SpO2 Sample Rate Control

These bits define the effective sampling rate, with one sample consisting of one IR pulse/conversion and one RED pulse/conversion.

The sample rate and pulse width are related, in that the sample rate sets an upper bound on the pulse width time. If the user selects a sample rate that is too high for the selected LED_PW setting, the highest possible sample rate will instead be programmed into the register.

Bits 1:0: LED Pulse Width Control

These bits set the LED pulse width (the IR and RED have the same pulse width), and therefore, indirectly set the integration time of the ADC in each sample. The ADC resolution is directly related to the integration time.

Table 4. SpO2 Sample Rate Control

SPO2_SR[2:0]	SAMPLES (PER SECOND)
000	50
001	100
010	167
011	200
100	400
101	600
110	800

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

111	1000
-----	------

Table 5. LED Pulse Width Control

LED_PW[1:0]	PULSE WIDTH (μs)	ADC RESOLUTION (BITS)
00	200	13
01	400	14
10	800	15
11	1600	16

LED Configuration (0x09)

REGISTER	B7	B6	B5	B4	B3	B2	B1	B0	REG ADDR	POR STATE	R/W
LED Configuration	RED_PA[3:0]				IR_PA[3:0]				0x09	0x00	R/W

Bits 7:4: Red LED Current Control

These bits set the current level of the Red LED as in Table 6.

Bits 3:0: IR LED Current Control

These bits set the current level of the IR LED as in Table 6.

Table 6. LED Current Control

Red_PA[3:0] OR IR_PA[3:0]	TYPICAL LED CURRENT (mA)*
0000	0.0
0001	4.4
0010	7.6
0011	11.0
0100	14.2
0101	17.4
0110	20.8
0111	24.0
1000	27.1
1001	30.6
1010	33.8
1011	37.0

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

1100	40.2
1101	43.6
1110	46.8
1111	50.0

*Actual measured LED current for each part can vary widely due to the proprietary trim methodology.

Temperature Data (0x16–0x17)

REGISTER	B7	B6	B5	B4	B3	B2	B1	B0	REG ADDR	POR STATE	R/W
Temp_Integer	TINT[7:0]								0x16	0x00	R/W
Temp_Fraction					TFRAC[3:0]				0x17	0x00	R/W

Temperature Integer

The on-board temperature ADC output is split into two registers, one to store the integer temperature and one to store the fraction. Both should be read when reading the temperature data, and the following equation shows how to add the two registers together:

$$T_{\text{MEASURED}} = T_{\text{INTEGER}} + T_{\text{FRACTION}}$$

This register stores the integer temperature data in two's complement format, where each bit corresponds to degree Celsius.

Table 7. Temperature Integer

REGISTER VALUE (hex)	TEMPERATURE (°C)
0x00	0
0x01	+1
...	...
0x7E	+126
0x7F	+127
0x80	-128
0x81	-127
...	...
0xFE	-2
0xFF	-1

Temperature Fraction

This register stores the fractional temperature data in increments of 0.0625°C (1/16th of a degree).

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

If this fractional temperature is paired with a negative integer, it still adds as a positive fractional value (e.g., $-128^{\circ}\text{C} + 0.5^{\circ}\text{C} = -127.5^{\circ}\text{C}$).

Applications Information

Sampling Rate and Performance

The MAX30100 ADC is a 16-bit sigma delta converter. The ADC sampling rate can be configured from 50sps to 1kps. The maximum sample rate for the ADC depends on the selected pulse width, which in turn, determines the ADC resolution. For instance, if the pulse width is set to 200 μs , then the ADC resolution is 13 bits and all sample rates from 50sps to 1kps are selectable. However, if the pulse width is set to 1600 μs , then only sample rates of 100sps and 50sps can be set. The allowed sample rates for both SpO₂ and HR mode are summarized in [Table 8](#) and [Table 9](#).

Power Considerations

The LEDs in MAX30100 are pulsed with a low duty cycle for power savings, and the pulsed currents can cause ripples in the LED power supply. To ensure these pulses do not translate into optical noise at the LED outputs, the

power supply must be designed to handle peak LED current. Ensure that the resistance and inductance from the power supply (battery, DC/DC converter, or LDO) to the device LED+ pins is much smaller than 1 Ω , and that there is at least 1 μF of power-supply bypass capacitance to a low impedance ground plane. The decoupling capacitor should be located physically as close as possible to the MAX30100 device.

In the heart-rate only mode, the red LED is inactive, and only the IR LED is used to capture optical data and determine the heart rate. This mode allows power savings due to the red LED being off; in addition, the IR_LED+ power supply can be reduced to save power because the forward voltage of the IR LED is significantly less than that of the red LED.

The average IDD and LED current as function of pulse width and sampling rate is summarized in [Table 10](#) to [Table 13](#).

Table 8. SpO₂ Mode (Allowed Settings)

SAMPLES (per second)	PULSE WIDTH (μs)			
	200	400	800	1600
50	O	O	O	O
100	O	O	O	O
167	O	O	O	
200	O	O	O	
400	O	O		
600	O			
800	O			
1000	O			
Resolution (bits)	13	14	15	16

**Table 9. Heart-Rate Mode
(Allowed Settings)**

**MAX30100 Pulse
Oximeter and Heart-
Rate Sensor IC for
Wearable Health**

SAMPLES (per second)	PULSE WIDTH (μs)			
	200	400	800	1600
50	○	○	○	○
100	○	○	○	○
167	○	○	○	
200	○	○	○	
400	○	○		
600	○	○		
800	○	○		
1000	○	○		
Resolution (bits)	13	14	15	16

**Table 10. SpO₂ Mode: Average IDD
Current (μA) R_PA = 0x3, IR_PA = 0x3**

SAMPLES (per second)	PULSE WIDTH (μs)			
	200	400	800	1600
50	628	650	695	782
100	649	691	776	942
167	678	748	887	
200	692	775	940	
400	779	944		
600	865			

800	952			
1000	1037			

**Table 11. SpO₂ Mode: Average LED
Current (mA) R_PA = 0x3, IR_PA = 0x3**

SAMPLES (per second)	PULSE WIDTH (μs)			
	200	400	800	1600
50	0.667	1.332	2.627	5.172
100	1.26	2.516	4.96	9.766
167	2.076	4.145	8.173	
200	2.491	4.93	9.687	

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

400	4.898	9.765		
600	7.319			
800	9.756			
1000	12.17			

Table 12. Heart-Rate Mode: Average IDD Current (μ A) IR_PA = 0x3

SAMPLES (per second)	PULSE WIDTH (μ s)			
	200	400	800	1600
50	608	616	633	667
100	617	634	669	740
167	628	658	716	831
200	635	670	739	876
400	671	740	878	
600	707	810		

Hardware Interrupt

The active-low interrupt pin pulls low when an interrupt is triggered. The pin is open-drain and requires a pullup resistor or current source to an external voltage supply (up to +5V from GND). The interrupt pin is not designed to sink large currents, so the pullup resistor value should be large, such as 4.7k Ω .

800	743	881		
1000	779	951		

Table 13. Heart-Rate Mode: Average LED Current (mA) IR_PA = 0x3

SAMPLES (per second)	PULSE WIDTH (μ s)			
	200	400	800	1600
50	0.256	0.511	1.020	2.040
100	0.512	1.022	2.040	4.077
167	0.854	1.705	3.404	6.795
200	1.023	2.041	4.074	8.130
400	2.042	4.074	8.123	
600	3.054	6.089		
800	4.070	8.109		
1000	5.079	10.11		

The internal FIFO stores up to 16 samples, so that the system processor does not need to read the data after every sample. Temperature data may be needed to properly interpret SpO₂ data, but the temperature does not need to be sampled very often—once a second or every few seconds should be sufficient. In heart-rate mode temperature information is not necessary.

Table 14. Red LED Current Settings vs. LED Temperature Rise

RED LED CURRENT SETTING	RED LED DUTY CYCLE (% OF LED PULSE WIDTH TO SAMPLE TIME)	ESTIMATED TEMPERATURE RISE (ADD TO TEMPERATURE SENSOR MEASUREMENT) ($^{\circ}$ C)
0001 (3.1mA)	8	0.1
1111 (35mA)	8	2
0001 (3.1mA)	16	0.3
1111 (35mA)	16	4
0001 (3.1mA)	32	0.6
1111 (35mA)	32	8

Timing for Measurements and Data Collection

Timing in SpO₂ Mode

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

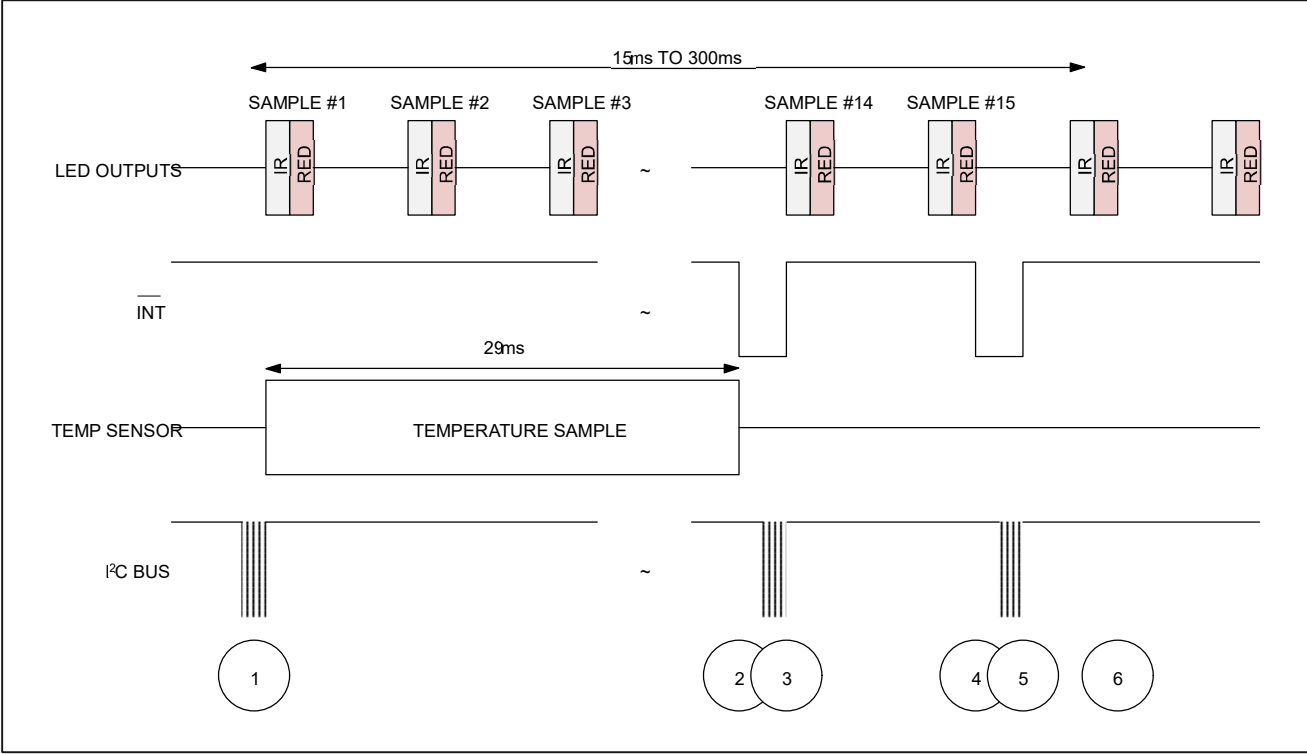


Figure 3. Timing for Data Acquisition and Communication When in SpO2 Mode

Table 15. Events Sequence for Figure 3 in SpO2 Mode

EVENT	DESCRIPTION	COMMENTS
1	Enter into SpO2 mode. Initiate a temperature measurement.	I2C Write Command Sets MODE[2:0] = 0x03. At the same time, set the TEMP_EN bit to initiate a single temperature measurement. Mask the SPO2_RDY Interrupt.
2	Temperature measurement complete, interrupt generated	TEMP_RDY interrupt triggers, alerting the central processor to read the data.
3	Temp data is read, interrupt cleared	
4	FIFO is almost full, interrupt generated	Interrupt is generated when the FIFO has only one empty space left.
5	FIFO data is read, interrupt cleared	

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

6	Next sample is stored	New sample is stored at the new read pointer location. Effectively, it is now the first sample in the FIFO.
---	-----------------------	---

Timing in Heart-Rate Mode

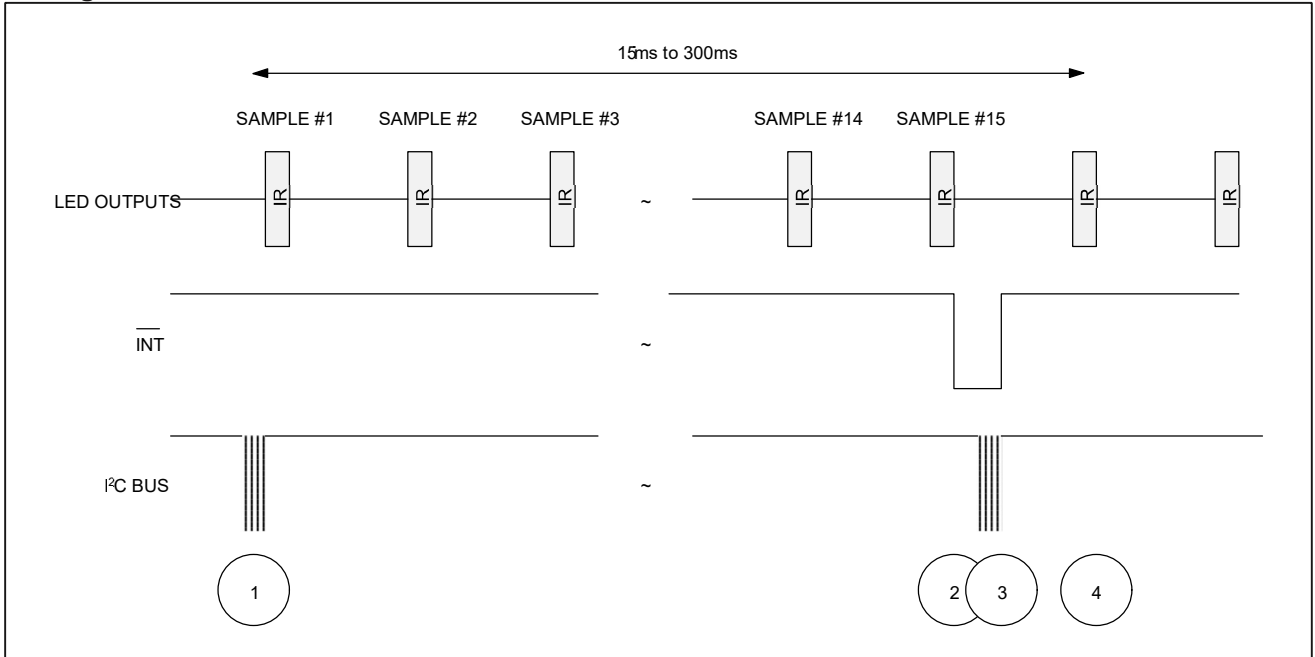


Figure 4. Timing for Data Acquisition and Communication When in Heart Rate Mode

Table 16. Events Sequence for Figure 4 in Heart-Rate Mode

EVENT	DESCRIPTION	COMMENTS
1	Enter into heart rate mode	I2C Write Command Sets MODE[2:0] = 0x02. Mask the HR_RDY interrupt.
2	FIFO is almost full, interrupt generated	Interrupt is generated when the FIFO has only one empty space left.
3	FIFO data is read, interrupt cleared	
4	Next sample is stored	New sample is stored at the new read pointer location. Effectively, it is now the first sample in the FIFO.

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

Power Sequencing and Requirements

Power-Up Sequencing

[Figure 5](#) shows the recommended power-up sequence for the MAX30100.

It is recommended to power the VDD supply first, before the LED power supplies (R_LED+, IR_LED+). The interrupt and I2C pins can be pulled up to an external voltage even when the power supplies are not powered up.

After the power is established, an interrupt occurs to alert the system that the MAX30100 is ready for operation. Reading the I2C interrupt register clears the interrupt, as shown in [Figure 5](#).

Power-Down Sequencing

The MAX30100 is designed to be tolerant of any power-supply sequencing on power-down.

I2C Interface

The MAX30100 features an I2C/SMBus-compatible, 2-wire serial interface consisting of a serial data line (SDA) and a serial clock line (SCL). SDA and SCL facilitate communication between the MAX30100 and the master at clock rates up to 400kHz. [Figure 1](#) shows the 2-wire interface timing diagram. The master generates SCL and initiates data transfer on the bus. The master device writes data to the MAX30100 by transmitting the proper slave address followed by data. Each transmit sequence is framed by a START (S) or REPEATED START (Sr) condition and a STOP (P) condition. Each word transmitted to the MAX30100 is 8 bits long and is followed by an acknowledge clock pulse. A master reading data from the MAX30100 transmits the proper slave address followed by a series of nine SCL pulses.

The MAX30100 transmits data on SDA in sync with the master-generated SCL pulses. The master acknowledges receipt of each byte of data. Each read sequence is framed by a START (S) or REPEATED START (Sr) condition, a not acknowledge, and a STOP (P) condition. SDA operates as both an input and an open-drain output. A pullup resistor, typically greater than 500Ω, is required on SDA. SCL operates only as an input. A pullup resistor, typically greater than 500Ω, is required on SCL if there are multiple masters on the bus, or if the single master has an open-drain SCL output.

Bit Transfer

One data bit is transferred during each SCL cycle. The data on SDA must remain stable during the high period of the SCL pulse. Changes in SDA while SCL is high are control signals. See the [START and STOP Conditions](#) section.

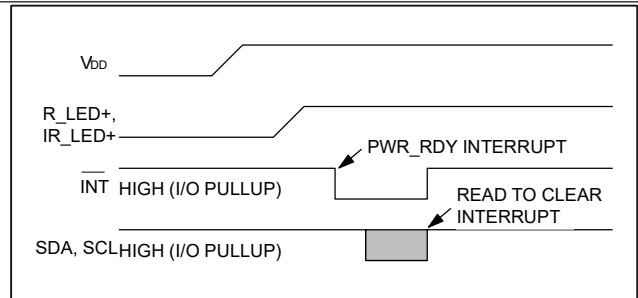


Figure 5. Power-Up Sequence of the Power-Supply Rails

START and STOP Conditions

SDA and SCL idle high when the bus is not in use. A master initiates communication by issuing a START condition. A START condition is a high-to-low transition on SDA with SCL high. A STOP condition is a low-to-high transition on SDA while SCL is high (Figure 6). A START condition from the master signals the beginning of a transmission to the MAX30100. The master terminates transmission, and frees the bus, by issuing a STOP condition. The bus remains active if a REPEATED START condition is generated instead of a STOP condition.

Early STOP Conditions

The MAX30100 recognizes a STOP condition at any point during data transmission except if the STOP condition occurs in the same high pulse as a START condition. For proper operation, do not send a STOP condition during the same SCL high pulse as the START condition.

Slave Address

A bus master initiates communication with a slave device by issuing a START condition followed by the 7-bit slave ID. When idle, the MAX30100 waits for a START condition followed by its slave ID. The serial interface compares each slave ID bit by bit, allowing the interface to power down and disconnect from SCL immediately if an incorrect slave ID is detected. After recognizing a START condition followed by the correct slave ID, the MAX30100 is ready to accept or send data. The LSB of the slave

ID word is the Read/Write (R/W) bit. R/W indicates or reading data from the MAX30100 (R = 0, W = 1 selects a read condition). After the R/W bit, the MAX30100 issues an acknowledge pulse every one clock cycle.

The MAX30100 slave ID consists of 7 bits: B7 (set to 0b1010111). The R/W bit (B0) is transmitted first, followed by B7 to B1. See Table 18 for the slave IDs of the MAX30100.

Acknowledge

The acknowledge bit (ACK) is the bit that the MAX30100 uses to handshake with the master when in write mode (Figure 7). The MAX30100 pulls SDA down during the entire master clock cycle. The MAX30100 allows for detection of unsuccessful data transfer if the previous byte is successful, the bus is busy or if a system fault has caused an unsuccessful data transfer, communication. The master pulls SDA up on the 9th clock cycle to acknowledge. If the MAX30100 is in read mode, the master pulls SDA up after each read by the MAX30100 to continue. A not-acknowledge condition occurs if the master reads the final byte of data from the MAX30100 by a STOP condition.

Table 17. Slave ID Description

B7	B6	B5	B4	B3	B2	B1	B0	WRITE ADDRESS	READ ADDRESS
1	0	1	0	1	1	1	R/W	0xAE	0xAF

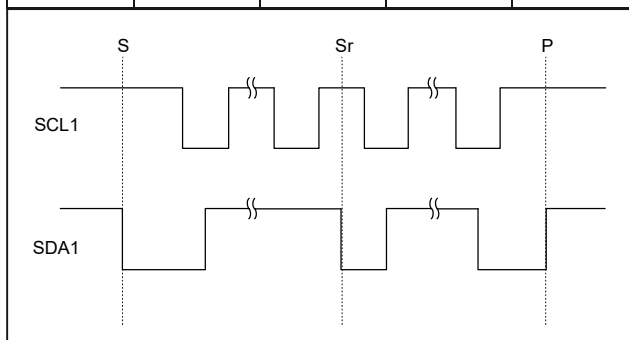


Figure 6. START, STOP, and REPEATED START Conditions

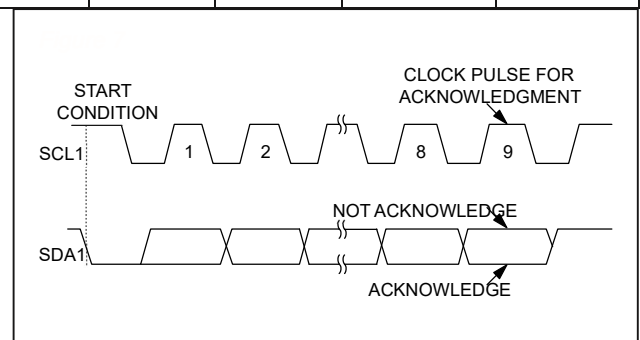


Figure 7. Acknowledge

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

Write Data Format

For the write operation, send the slave ID as the first byte followed by the register address byte and then one or more data bytes. The register address pointer increments automatically after each byte of data received. For example, the entire register bank can be written by at one time. Terminate the data transfer with a STOP condition. The write operation is shown in [Figure 8](#).

The internal register address pointer increments automatically, so writing additional data bytes fill the data registers in order.

Read Data Format

For the read operation, two I2C operations must be performed. First, the slave ID byte is sent followed by the I2C register that you wish to read. Then a REPEATED START (Sr) condition is sent, followed by the read slave

ID. The MAX30100 then begins sending data beginning with the register selected in the first operation. The read pointer increments automatically, so the MAX30100 continues sending data from additional registers in sequential order until a STOP (P) condition is received. The exception to this is the FIFO_DATA register, at which the read pointer no longer increments when reading additional bytes. To read the next register after FIFO_DATA, an I2C write command is necessary to change the location of the read pointer.

An initial write operation is required to send the read register address.

Data is sent from registers in sequential order, starting from the register selected in the initial I2C write operation. If the FIFO_DATA register is read, the read pointer does not automatically increment, and subsequent bytes of data contain the contents of the FIFO.

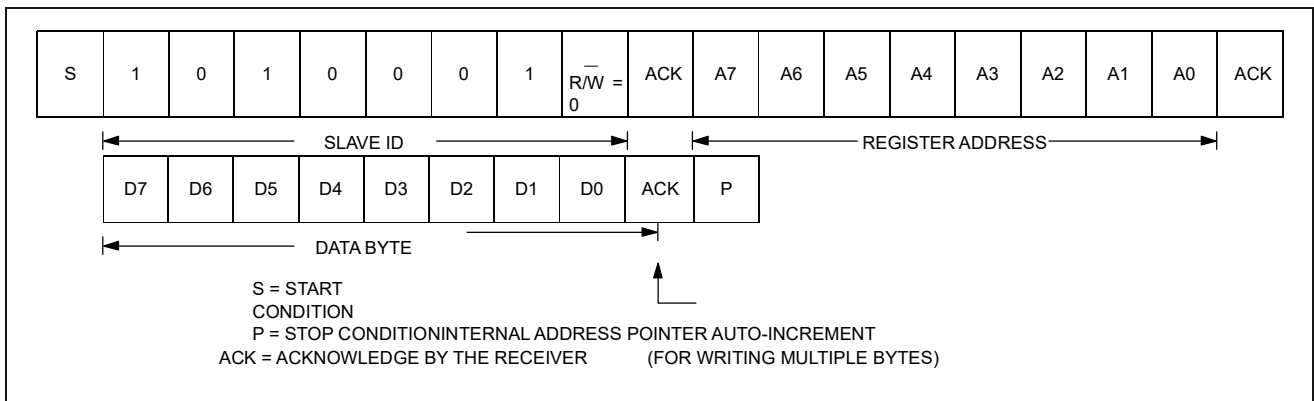


Figure 8. Writing One Data Byte to the MAX30100

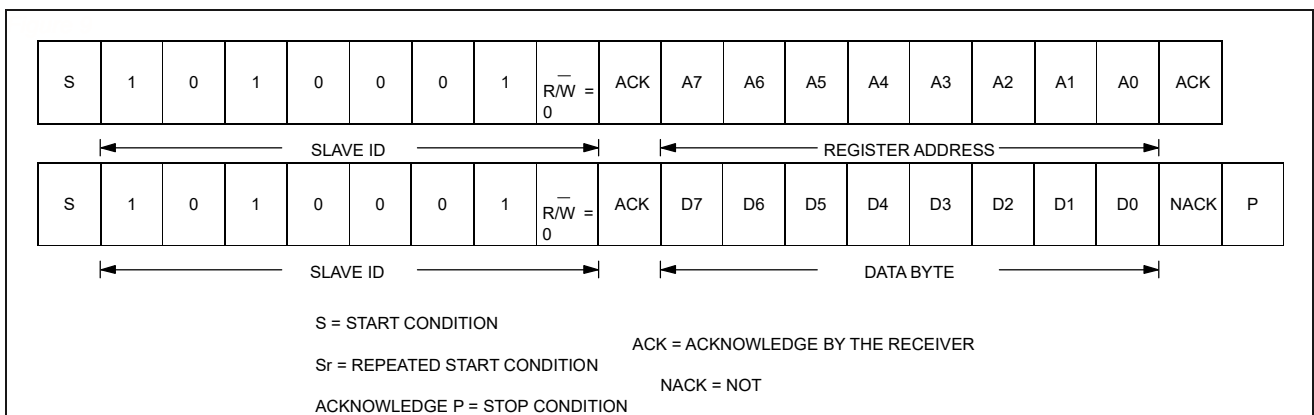


Figure 9. Reading One Byte of Data from the MAX30100

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health


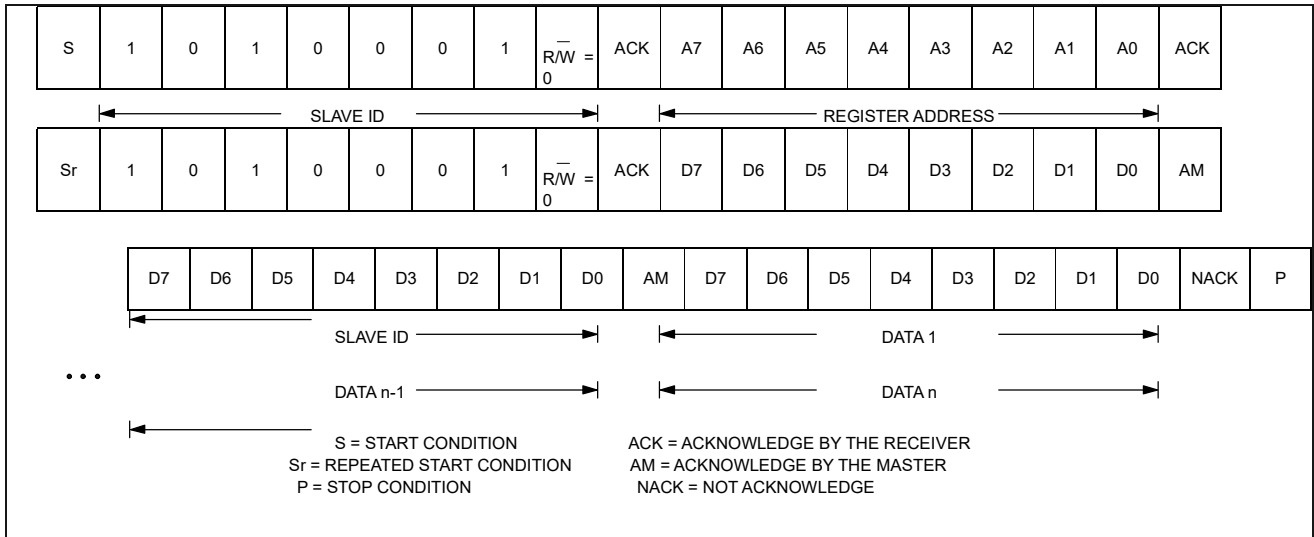


Figure 10. Reading Multiple Bytes of Data from the MAX30100

Typical Application Circuit

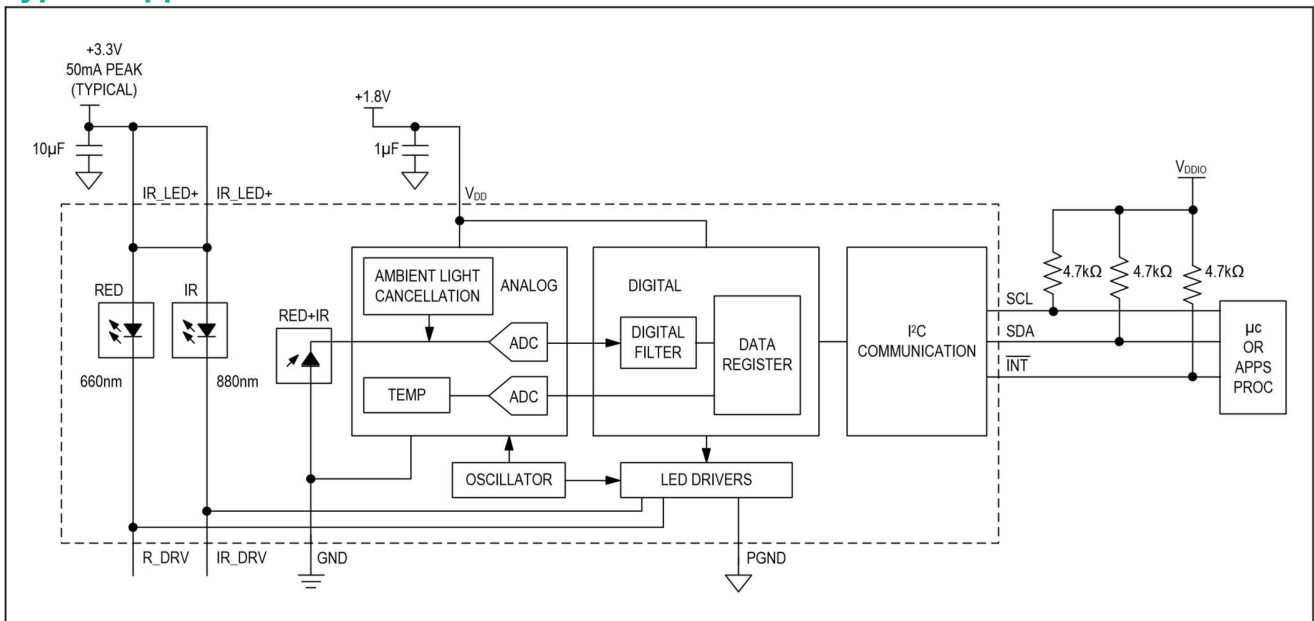

Ordering Information

PART	TEMP RANGE	PIN-PACKAGE
------	------------	-------------

Chip Information

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

MAX30100EFD+	-40°C to +85°C	14 OESIP (0.8mm pitch)
--------------	----------------	---------------------------


PROCESS: BiCMOS

+Denotes a lead(Pb)-free/RoHS-compliant package.

Package Information

For the latest package outline information and land patterns (footprints), go to www.maximintegrated.com/packages. Note that a "+", "#", or "-" in the package code indicates RoHS status only. Package drawings may show a different suffix character, but the drawing pertains to the package regardless of RoHS status.

PACKAGE TYPE	PACKAGE CODE	OUTLINE NO.	LAND PATTERN NO.
14 OESIP	F142D5+2	21-0880	90-0461

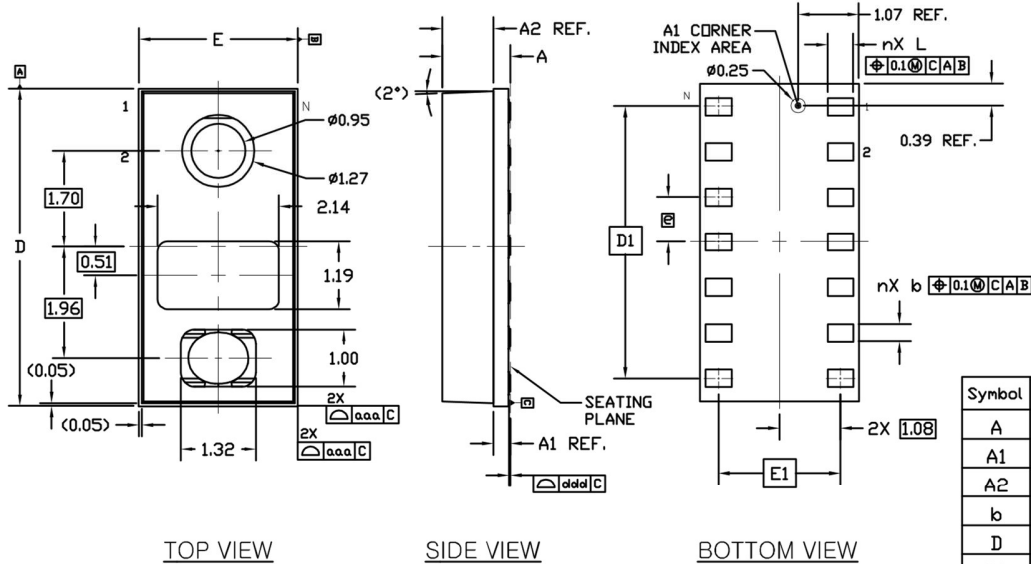

Symbol	MIN	NOM	MAX
A	1.1	1.2	1.3
A1	0.3 REF.		
A2	0.9 REF.		
b	0.25	0.30	0.35
D	5.5	5.6	5.7
D1	4.8 BSC		
E	2.7	2.8	2.9
E1	2.15 BSC		
e	0.8 BSC		
L	0.40	0.45	0.50
N	14		
aaa	0.1		
ddd	0.08		

NOTES:

1. ALL DIMENSIONS ARE IN MILLIMETERS. ANGLES ARE IN DEGREES.
2. DIMENSIONING & TOLERANCING CONFORM TO ASME Y14.5M-1994.
3. N IS THE TOTAL NUMBER OF TERMINALS.
4. MATERIAL MUST BE COMPLIANT WITH MAXIM SPECIFICATION 10-0131 FOR SUBSTANCE CONTENT, MUST BE Eu ROHS COMPLIANT WITHOUT EXEMPTION AND Pb-FREE.
5. ALL DIMENSIONS APPLY TO Pb FREE (+) PARTS.
6. PACKAGE CODE: F142D5+2



TITLE:
PACKAGE OUTLINE, 14L
QLGA, 2.8x5.6x1.2mm


APPROVAL	DOCUMENT CONTROL NO. 21-0880	REV. B	1/1
----------	---------------------------------	-----------	-----

-DRAWING NOT TO SCALE-

Package Information (continued)

For the latest package outline information and land patterns (footprints), go to www.maximintegrated.com/packages. Note that a "+", "#", or "-" in the package code indicates RoHS status only. Package drawings may show a different suffix character, but the drawing pertains to the package regardless of RoHS status.

MAX30100 Pulse Oximeter and Heart-Rate Sensor IC for Wearable Health

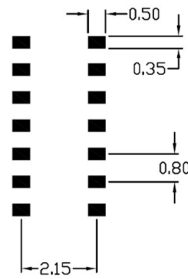

NOTES:

1. REFERENCE PKG. OUTLINE: 21-0880.
2. LAND PATTERN COMPLIES TO: IPC7351A.
3. TOLERANCE: +/- 0.02 MM.
4. ALL DIMENSIONS APPLY TO PbFREE (+) PKG. CODE ONLY
5. ALL DIMENSIONS IN MM.

-DRAWING NOT TO SCALE-



This document (including dimensions, notes & specs) is a recommendation based on typical circuit board manufacturing parameters. Since land pattern design depends on many factors unknown to Maxim (eg. user's board manufacturing specs), user must determine suitability for use. This document is subject to change without notice. Contact technical support at <http://www.maxim-ic.com/support> for further questions.

TITLE:
PACKAGE LAND PATTERN,
[F142D5+2] QLGA

APPROVAL	DOCUMENT CONTROL NO. 90-0461	REV. A	1/1
----------	---------------------------------	-----------	-----

MAX30100

Pulse Oximeter and F for Wearable Health IC

Revision History

REVISION NUMBER	REVISION DATE	DESCRIPTION	PAGES CHANGED
0	9/14	Initial release	—

For pricing, delivery, and ordering information, please contact Maxim Direct at 1-888-629-4642, or visit Maxim Integrated's website at www.maximintegrated.com.

Maxim Integrated cannot assume responsibility for use of any circuitry other than circuitry entirely embodied in a Maxim Integrated product. No circuit patent licenses are implied. Maxim Integrated reserves the right to change the circuitry and specifications without notice at any time. The parametric values (min and max limits) shown in the Electrical Characteristics table are guaranteed. Other parametric values quoted in this data sheet are provided for guidance.

Maxim Integrated and the Maxim Integrated logo are trademarks of Maxim Integrated Products, Inc. © 2014 Maxim Integrated Products, Inc.